



Instructions for Speedster[®] LTD3, LTD5 & LTD12



Please read before use.



Register your product
at <http://www.mytee.com/support/register>



LTD3 p.2
LTD5 p.9
LTD12 p.16
General & Maintenance information p.23

Model # _____


Serial # _____

Form # ADP-SLTD

4-14


SPEEDSTER® LTD3

SPEEDSTER® LTD3 FRONT

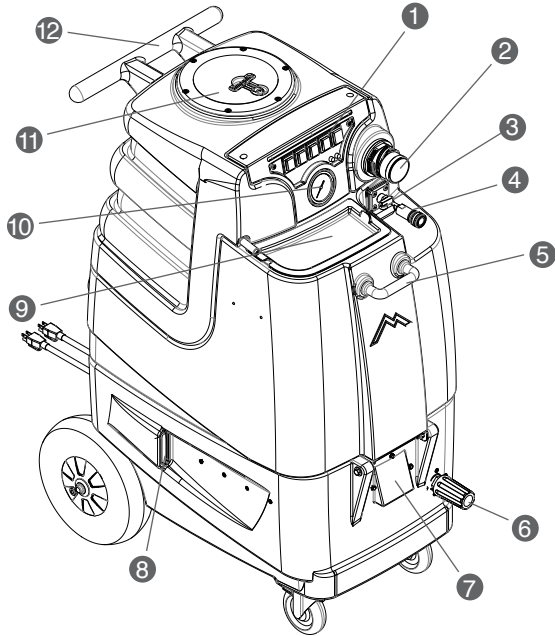


- | | |
|---------------------------------|------------------|
| 1. Switch Plate | 7. Front Fan |
| 2. 2" Male Cuff-Lynx™ Inlet | 8. Side Vents |
| 3. Prime Valve | 9. Solution Lid |
| 4. Female Quick Disconnect (QD) | 10. PSI Gauge |
| 5. Front Handle | 11. Recovery Lid |
| 6. Pressure Regulator | 12. Push Handle |

SPEEDSTER® LTD3 BACK

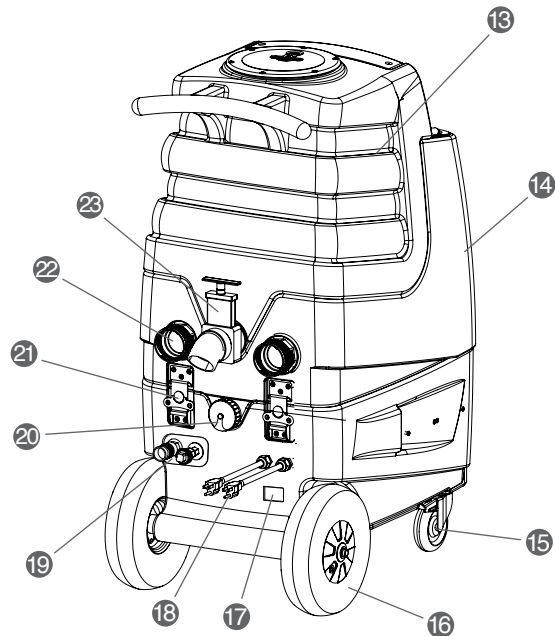


- | | |
|--|--|
| 13. Recovery Tank | 19. Auto Fill/Pump Out
Hose Connections |
| 14. Solution Tank | 20. Solution Tank Drain |
| 15. 4" Locking Casters | 21. Service Latches |
| 16. 10" foam filled
semi-pneumatic wheels | 22. Rear Vacuum Exhaust
Optional Muffler Port |
| 17. Hour Meter | 23. Recovery Tank Drain Valve |
| 18. Power Cords | |

SPEEDSTER® LTD3 ITEMS INCLUDED

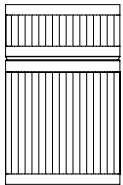


H110 Cuff-Lynx™
2" x 2" Hose Adapter

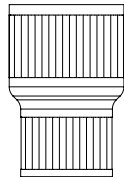

H141 Cuff-Lynx™
2" x 1.5" Hose Reducer



G008 - Pack of Piglet™
filters

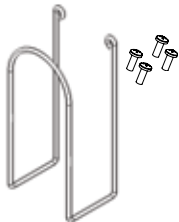

H375- Hose Hanger
(4) screws




H226 Drain Elbow

SPEEDSTER® LTD3 CORD


(Primary) Right Cord: Plug in yellow-tagged power cable for Power To Vac 1, Pump, & 600W Heater.

(Secondary) Left Cord: Plug in power cable for Vac 2, Pump-Out & 1,000W Heater.

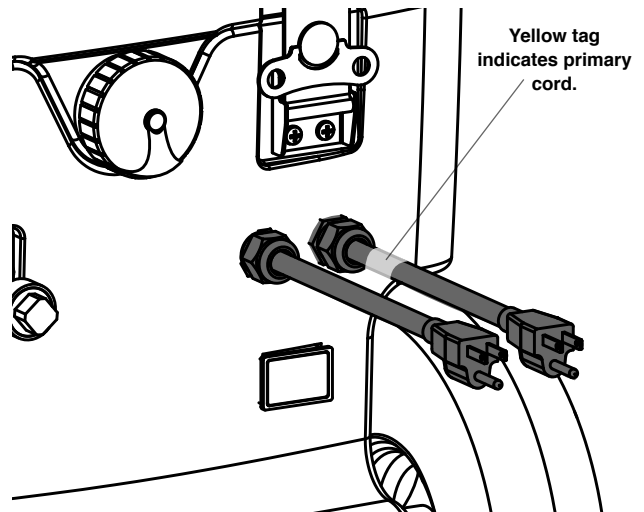


Plug each power cord into a separate, 20A grounded wall outlet. **Outlets must be on two separate breakers.** When the amber light on the switch plate illuminates and the audible tone sounds, the machine is on separate circuits (not necessarily 20A circuits). You can identify the primary cord by the yellow tag.

SPEEDSTER® LTD3 VAC/SOL HOSE CONNECTIONS

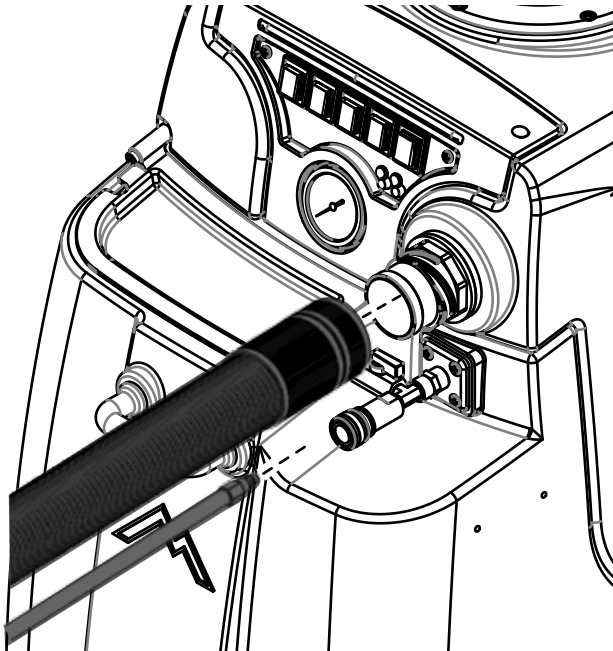


Attach female end of a solution hose to a wand or tool and the male end to the LTD's QD. Then connect a vacuum hose to a wand and the 2" male Cuff-Lynx™ hose port. (If using the optional de-foamer, install the kit onto the vacuum port according to the instructions that come with the de-foamer kit.)

SPEEDSTER® LTD3 SWITCHES

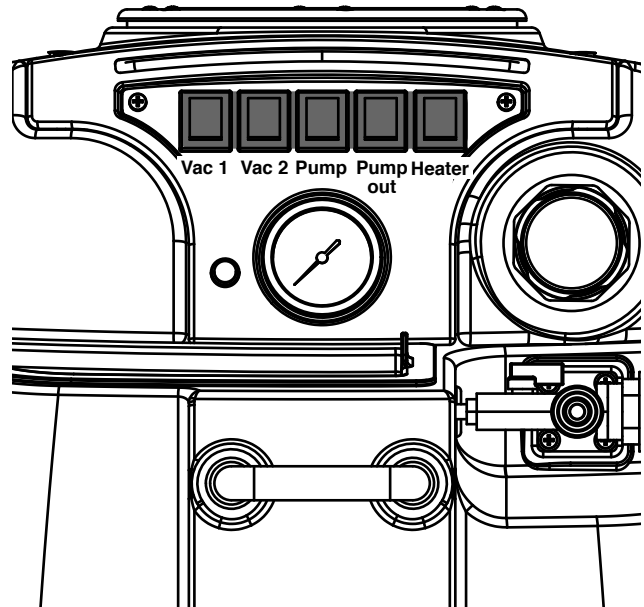

To use vacuum, turn on Vac 1 and Vac 2. To use pump, turn on Pump. To use pump-out, turn on Pump-Out switch. To use Heater, turn on Heater. Release tool trigger. Wait 8 – 10 minutes for unit to pre-heat. Once heated, re-key upholstery tool until hot water begins flowing. Once hot water is flowing, release trigger and pre-heat an additional 4 – 5 minutes.


SPEEDSTER® LTD3 PRIME VALVE & PRESSURE REGULATOR

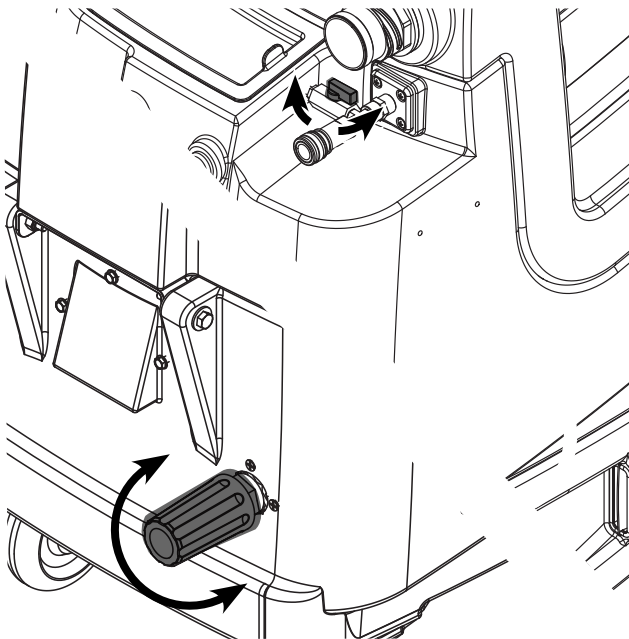

Prime the pump by having the Prime Valve parallel with its pipe and turn it clock-wise to run the pump. Turning the Pressure Regulator to its left will decrease water pressure and turning to the right will increase water pressure.


*Please refer to the Pressure Gauge to monitor your water pressure.

SPEEDSTER® LTD3 FILL SOLUTION TANK

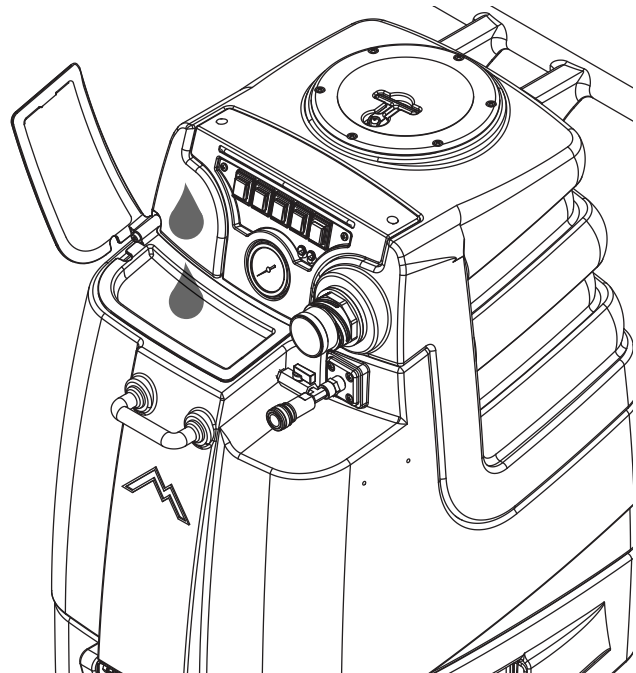


You can lift the lid to manually fill the tank or follow the "Operating Instructions" for auto-fill use.

SPEEDSTER® LTD3 FLOAT SWITCHES

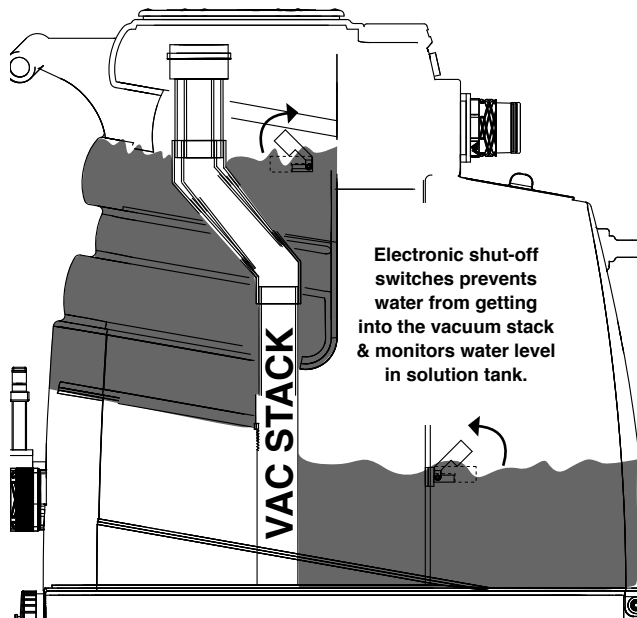


The LTD is equipped with an electronic float switch inside the recovery and solution tank. The recovery float switch is activated by rising water to prevent suction into the vacuum stacks damaging the motors. The solution float switch shuts off the auto-fill once water level reaches switch.

SPEEDSTER® LTD3 AUTO-FILL CONNECTIONS

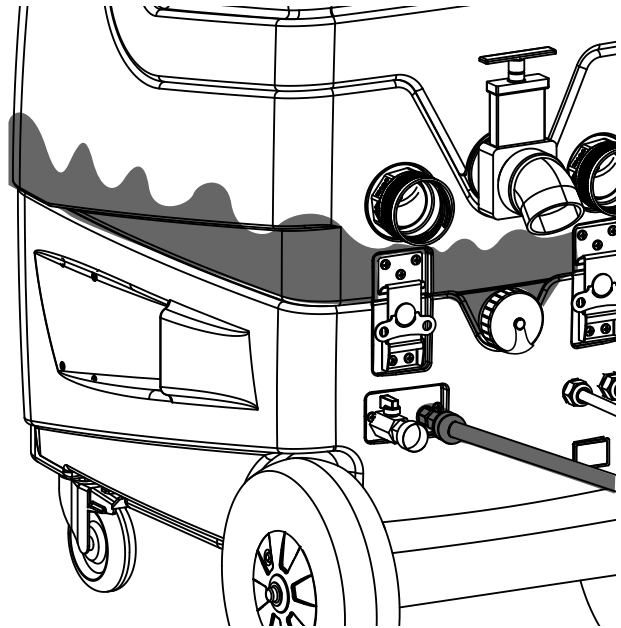


Using one end of a 1/2" garden hose, attach it to the mounted connection behind the LTD unit, then attach the other end to the desired faucet connection. Turn on the faucet water and let the auto-fill begin to fill. It will shut off when the water level reaches the LTD's electronic float switch.

SPEEDSTER® LTD3 PUMP-OUT CONNECTIONS

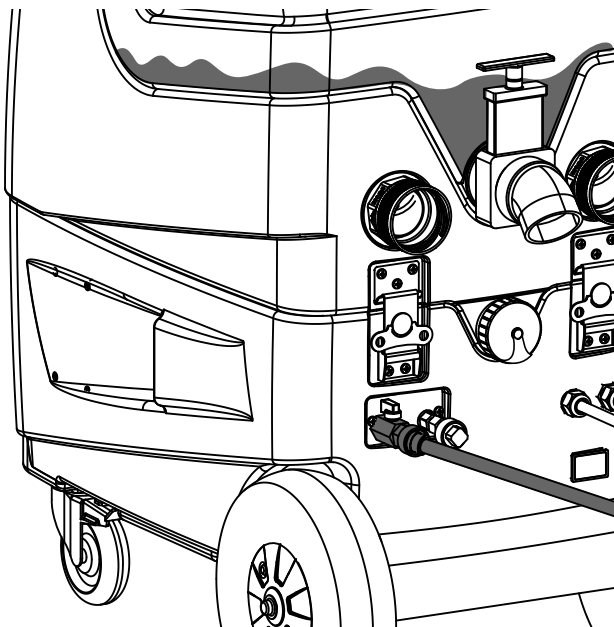


Using a separate 1/2" garden hose, attach one end to the LTD's mounted pump-out connection and lay the other end of the hose in a drainable location. With the pump-out switch activated and the valve parallel with its pipe, the unit will automatically drain water from the fill tank while the auto-fill maintains water levels. Make sure ball valve is open!

SPEEDSTER® LTD3 RECOVERY DRAIN VALVE

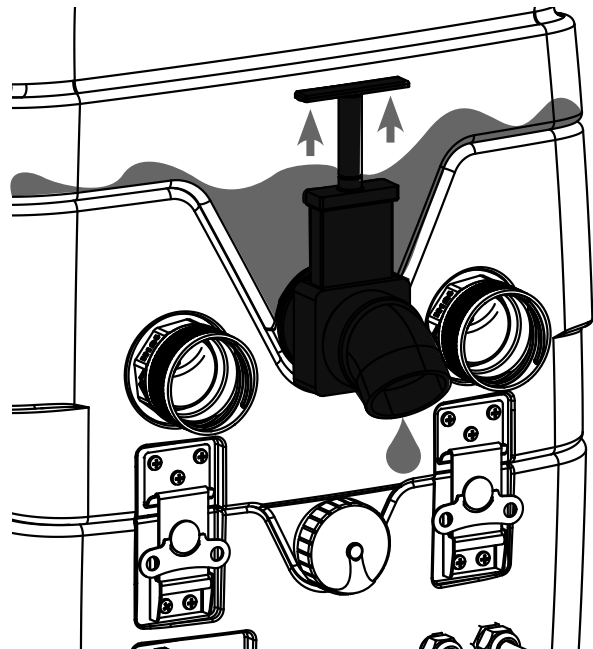


Make sure the Auto-Fill is turned off and then locate and lift the bucket high drain valve on the rear of the LTD unit to empty the tank.

SPEEDSTER® LTD3 SOLUTION TANK DRAIN VALVE

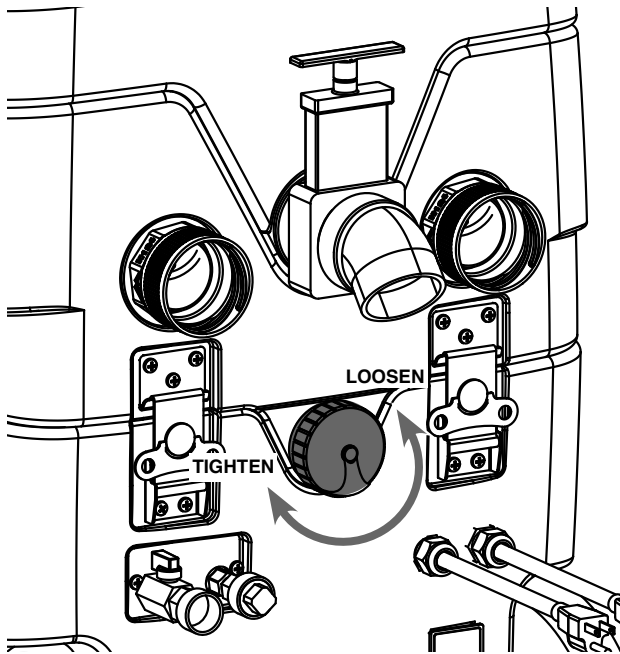


To remove any remaining water in the solution tank, located on the back of the unit is a cap, twist and remove cap to empty tank.

**SPEEDSTER® LTD3
FILTER MAINTENANCE**

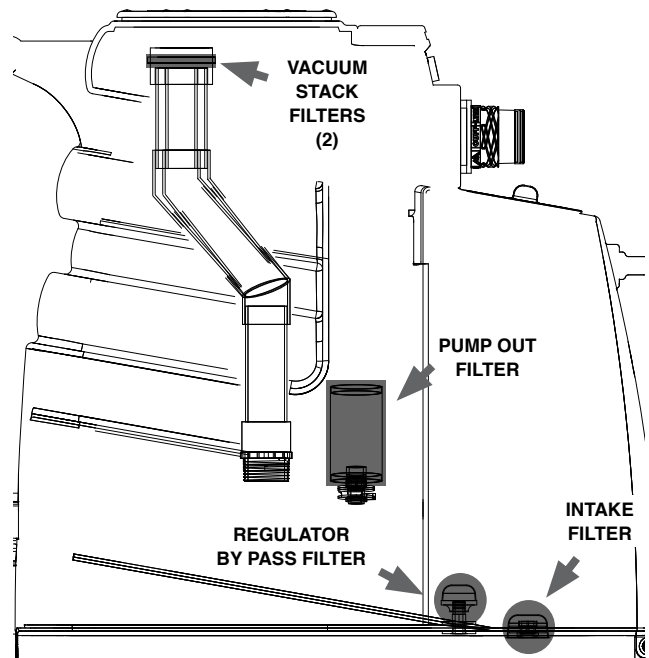


The LTD's five internal filters must be cleaned regularly and are located in the locations listed in the following diagram. Twist the filters to remove them then clean and replace in original locations. If a filter is torn or damaged, replace with a new one.

**SPEEDSTER® LTD3 TANK LATCHES
& PUMP HOUR METER**

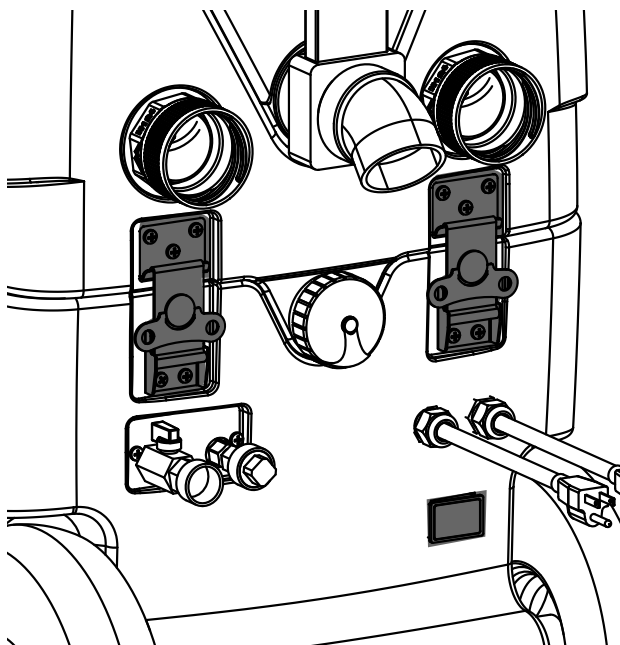

The rear latches can be unlatched from the lower half of the unit to open it for internal repairs and cleaning. To unlatch, flip and twist latches. The hour meter activates when the pump is turned on. This helps monitor usage and when to make oil changes. Refer to p.24 for oil maintenance instructions.

MYTEE® SYSTEM MAINTAINER

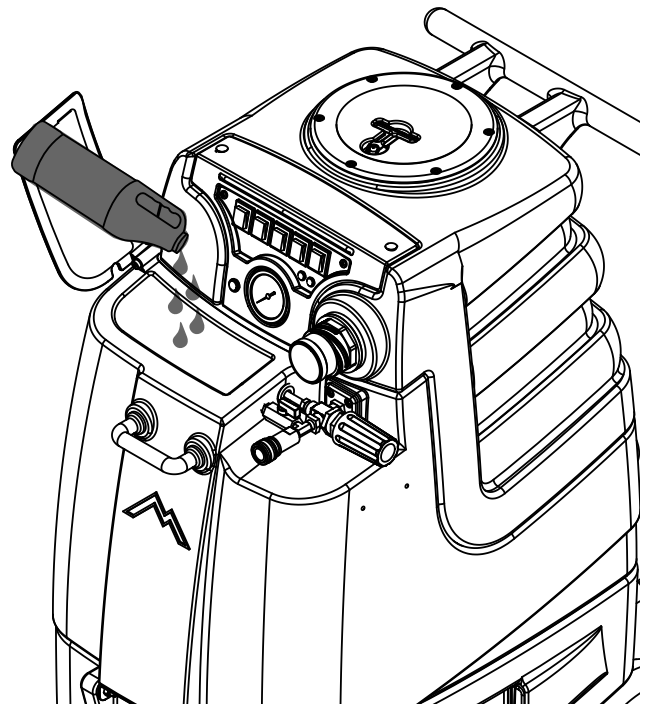


Weekly flushing of the solution system with Mytee System Maintainer helps keep lines clean and prevents chemical build-up, improving pump life, performance, and pressure.

SPEEDSTER® LTD3 PARTS & PRICING

ITEM NO.	PART NO.	DESCRIPTION	QTY.	MSRP
133	PH633-06	PPE, 1/12" x 6" PVC	2	\$4.99/ft
134	PH633-03	pipe, pvc, 1/12"	2	\$4.99/ft
135	PH633-4	pipe, pvc, 1/12"	2	\$4.99/ft
136	A026	elbow, inlet assembly 2"	1	\$15.99 ea
137	H226	spout, drain, 45 degree	1	\$3.19 ea
138	H225	valve, drain, 1/12"	1	\$20.99 ea
139	H333	mesh filter, auto dump, 1/2" npt	1	\$12.99 ea
140	B236	elbow, brass, 90 deg, 1/2" barb x 3/8" fpt	1	\$14.49 ea
141	H503	vac support, 3 steps, 3.25", no thrids	6	\$3.99 ea
142	G204	gasket, vac motor - Speedster	2	\$8.99 ea
143	PH628-7	vac hose, 2" black, wire reinforced	1	\$8.99 ft
144	H217	climp, hose, 2 1/4 dia	4	\$1.49 ea
145	H194	coupler, 2" dia x 2.5" length, s/s	2	\$10.00 ea
146	C321A	vac motor, 3 stage, low amp	2	\$139.99 ea
147	H096	bolt, 1/4-20 x 4, s/s	6	\$0.99 ea
148	B207	elbow, brass, 90 deg, 1/4" fpt x 1/4" fpt	2	\$5.99 ea
149	E373	level switch, vacuum shut-off, rear threads	1	\$13.99 ea
150	B156	nut, 1/4" npt	1	\$1.99 ea
151	B113	tee, brass, 1/4" fpt	1	\$6.99 ea
152	B643	adapter, brass, 3/8" npt x 1/4" npt	1	\$4.99 ea

ITEMS NOT SHOWN

PART NO.	DESCRIPTION	QTY.	MSRP
E352	LED strip light, with lead wires	1	\$26.99 ea
E350	power cord, ext 50', 12/3, black	2	\$74.99 ea
G008	pliget filter	1	\$6.29 ea
G076	filter bag, 3.5" mesh coarse mesh bag	1	\$4.99 ea
H110	Cuff, Lymx, 2" hose x 2" fems swivel	1	\$3.99 ea
H140	Cuff, Lymx, female x female thread	1	\$3.99 ea
H141	Cuff, Lymx, 2 x 1.5" reducer	1	\$3.99 ea
H375	hanger, wire formed, hose	1	\$6.99 ea
AD127	stop sign, register your product	1	\$2.00 ea
ADM Cuff Lymx	Cuff Lymx instruction guide	1	n/a

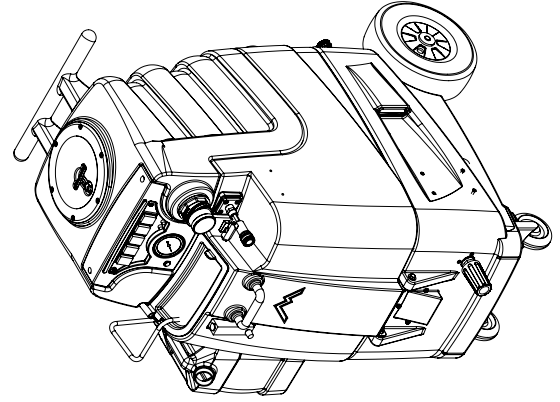


ITEM NO.	PART NO.	DESCRIPTION	QTY.	MSRP
67	G069	gasket, flow meter	1	\$0.99 ea
68	G036	cap, 2.5" threaded, tethered	2	\$3.49 ea
69	B117	strainer, with check, chemical injector	1	\$18.99 ea
70	PH632-26	sol hose, 1/4" silicone, braided, clear	1	\$6.49 ea
71	P534	bottle, 7 quart, w/ caps	1	\$17.99 ea
72	H846B	cap, gallon jug, 1-5/8"	1	\$0.99 ea
73	H547	hanger, wire for injection sprayer	1	\$7.49 ea
74	B131	fitting, 1/4" barb x 1/8" FPT	2	\$2.99 ea
75	PH634-18	sol hose, 1/4" silicone braided, clear	2	\$6.49 ea
76	B143	street elbow, 90 degrees, 1/8"	2	\$2.99 ea
77	H209	washer, 1 1/2" dia x 1 1/2" od x .075, s/s	9	\$0.99 ea
78	B216	nipple, brass, 3/8" x close	2	\$1.99 ea
79	B210	bushing, brass, 1/2" mpt x 3/8" fpt, hex	1	\$2.49 ea
80	B119A	filter, strainer, 1/2"	1	\$6.49 ea
81	B119	filter, strainer, 1/4"	1	\$3.99 ea
82	H254	washer, arid, ad, cut 1/2" id	2	\$0.99 ea
83	B110	adapter, brass, 1/4" w/ barb x 1/4" fpt, w/gasket	1	\$3.99 ea
84	H201	bolt, 1/4-20 x 1.2", hex head, zinc	2	\$0.99 ea
85	H213	washer, 1/4" lock, s/s	8	\$0.99 ea
86	H378	bracket, front hinge, spib	1	\$8.99 ea
87	H204	bolt, 1/4-20 x 1 3/4", hex head, s/s	2	\$0.99 ea
88	H485	handle, brace and dx	1	\$6.99 ea
89	H768	bolt, 1/4-20 x 3/4", serrated hex flange, zinc	2	\$0.99 ea
90	G052	washer, buna 1-1/8" od x 3/16" id	2	\$1.99 ea
91	H211	washer, 1/4" od, flat, s/s	2	\$0.99 ea
92	P509	LX series sol tank	1	\$141.95 ea
93	H650	bolt, 5/16" shoulder x 1 1/2" lg, alloy	1	\$0.99 ea
94	P513	solution tank lid, LTD	1	\$9.00 ea
95	H300A	bracket, "L"	2	\$6.99 ea
96	H770	bolt, 1/4-20 x 1 1/2", serrated hex flange, zinc	4	\$0.99 ea
97	H124	Cuff Lymx, 2" mpt x 2" female cuff	2	\$3.99 ea
98	H484	plate, mounting, QD	1	\$4.99 ea
99	B142	coupling, brass, 1/4" fpt x 1/4" fpt	1	\$4.49 ea
100	B135	tee, brass, 1/4" mpt	1	\$5.49 ea
101	B656	ball valve, 1/4"	1	\$13.49 ea
102	PH634-36	sol hose, 1/4", 300 PSI	1	\$6.49 ft
103	B102	qd, brass, 1/4"	1	\$17.99 ea
104	AH117	hose, bulk, 40' (OAL), 1/4" fwt x 1/4" fwt	2	\$19.99 ea
105	H541A	valve, float, air/fill	1	\$108.99 ea
106	B198	coupler, 3/4" fpt x 1/2" mpt	1	\$16.99 ea
107	B167	street elbow, 1/2" fpt x 1/2" mpt	1	\$10.99 ea
108	B303	nipple, 3" x 1/4" mpt x 1/4" mpt	2	\$8.99 ea
109	B208	coupling, 3/8" fpt x 1/4" fpt	1	\$8.99 ea
110	H541C	chemical injector	1	\$39.99 ea
111	P512	LX series switch box	1	\$24.00 ea
112	E511	light, red, 250v	2	\$5.99 ea
113	E516	switch, rocker, 3 position	1	\$14.99 ea
114	H308D	gauge, pressure, 2000 PSI	1	\$38.99 ea
115	E512B	light, indicator, 125v (amber)	1	\$9.99 ea
116	E515	switch, rocker, 2 position	4	\$13.99 ea
117	H075	plate, switch, lid	1	\$7.99 ea
118	H031	plastic screw, 10 x 1"	2	\$0.99 ea
119	H434	plug, vent, heycou, 1/2"	2	\$4.48 ea
120	H135	Cuff Lymx, 2" m cuff x 2" mpt	1	\$3.99 ea
121	G083	gasket, 2" inlet	1	\$2.49 ea
122	P510	LX series vac tank	1	\$98.99 ea
123	H314	nut, lock, 1-1/2", steel	2	\$1.99 ea
124	P520	adapter, pvc, 1 1/2" mpt x 1 1/2" fms	2	\$2.99 ea
125	P508	adapter, 1.5" pvc, 45 deg, slip x slip	4	\$3.29 ea
126	H304	lock, #8 x 5/8 phi oval, s/s	6	\$0.99 ea
127	G090	lid, vac tank, clear, 7"	1	\$36.99 ea
128	G091	gasket, 7" vac lid	1	\$11.99 ea
129	PH633-1	pipe, pvc, 1-1/2"	2	\$4.99 ft
130	G022	filter, foam, 2-3/8" x 1"	2	\$2.99 ea
131	G097	screen, mesh filter, 1-1/2" dia	2	\$4.99 ea
132	P502	adapter, 1.5" pvc, slip x slip	2	\$5.00 ea

ITEM NO.	PART NO.	DESCRIPTION	QTY.	MSRP
1	H547	climp, hose, 5/16 x 20-32	16	\$1.99 ea
2	PH615-37	sol hose, 1/2", 306psi, black	1	\$8.99 ft
3	H212	flat washer, 9/16" ID x 1 1/16" OD, AN900-C916	4	\$0.99 ea
4	B199	coupler, 1/2" fpt x 1/4" fpt	3	\$8.99 ea
5	B644	adapter, brass, 1/2" barb x 1/4" mpt	1	\$8.99 ft
6	PH615-9	sol hose, 1/2", 306psi, black	1	\$8.99 ft
7	C381	pump out, 115v	1	\$187.99 ea
8	H186	screw, 10-32 x 3/4", phi flat fill thread	12	\$0.99 ea
9	H210	washer, 1/4" flat, s/s	28	\$0.99 ea
10	H273	nut, lock, #10-32 zinc	22	\$0.99 ea
11	H109	wheel, 10", foam filled	2	\$79.99 ea
12	H219	cap, axle, 1/2"	2	\$0.99 ea
13	H232	axle, 19-60" x 30"	1	\$9.99 ea
14	P514	vent, side, LTD	2	\$5.00 ea
15	H668	caster, 4", black hub & gray tread	2	\$19.49 ea
16	H542	bolt, 1/4-20 x 1 1/2", hex head, s/s	8	\$0.99 ea
17	H103	nut, lock, 1/4-20, nylon insert, s/s	15	\$0.99 ea
18	B126	elbow, brass, 90 deg, 1/4" mpt x 1/4" fpt	5	\$4.49 ea
19	H044	bracket, regulator, paired mount	1	\$27.99 ea
20	B127	plug, brass, 1/4" mpt, hex	1	\$0.99 ea
21	C313C	regulator, 450 psi, silver spring	1	\$86.99 ea
22	B136	elbow, brass, 90 deg, 1/4" mpt x 1/4" mpt	1	\$4.99 ea
23	AH184	hose, 3/8" x 1 1/4-1/2" (OAL), f	1	\$27.99 ea
24	PH632-23	sol hose, 1/4", 306psi, black	1	\$6.49 ft
25	B109	adapter, brass, 1/4" barb x 1/4" mpt	4	\$0.99 ea
26	H343	screw, 10 x 5/8" hex head, zinc	4	\$0.99 ea
27	C317	fan, cooling, 115v	1	\$21.49 ea
28	P511	LX series base	1	\$106.99 ea
29	E370	controller, water level dual pump or vac	1	\$94.99 ea
30	H202	bolt, 1/4-20 x 3/4", hex head	4	\$0.99 ea
31	B652	elbow, brass, 90 deg, 3/8" mpt x 1/4" mpt	2	\$8.49 ea
32	B259A	qd, brass, 1/4" fpt x 1/4" mpt	3	\$15.99 ea
33	B260A	qd, brass, 1/4" mpt x fpt	3	\$8.99 ea
34	AH184	hose, pulve, 3/8" x 1 1/2", (OAL)	1	\$31.99 ea
35	B107	nipple, brass, 1/4" m, hex	8	\$3.19 ea
36	B186	elbow, brass, 90 deg, 3/8" mpt x 3/8" fpt	3	\$8.99 ea
37	B105	bushing, brass, 3/8" mpt x 1/4"	3	\$3.19 ea
38	PH634-18	sol hose, 1/4", silicone braided, clear	1	\$6.49 ea
39	C313A	pump, CAT, 50-500 PSI, 120/240v	1	\$599.99 ea
40	PH615-26	sol hose, 1/2", 306psi, black	1	\$8.99 ft
41	B123	adapter, brass, 1/2" barb x 1/4" fpt	1	\$4.99 ea
42	B160	adapter, brass, 1/2" barb x 3/8" fms, ball end	2	\$3.49 ea
43	H486	latch, front	2	\$13.99 ea
44	H230	screw, 10-32 x 1 1/2", phi pan head, s/s	22	\$0.99 ea
45	G068	bumper, 7/8" x 1 1/4" head	2	\$1.99 ea
46	E564	controller, circuit light	1	\$62.99 ea
47	H221	nut, lock, 1/2" steel	2	\$1.99 ea
48	H220	fitting, strain relief, cord	2	\$3.19 ea
49	E550	power cord, pigtail, 30', 12/2, black	2	\$11.49 ea
50	E369	hour meter, paired mount, analog	1	\$35.99 ea
51	B265B	qd, 1/2" npt x 3/4" mpt, pump-out	2	\$3.99 ea
52	B204	qd, 3/4" female x female garden hose	2	\$9.99 ea
53	B656A	ball valve, 1/2", m x 1/2" f	1	\$16.49 ea
54	H039	plate, auto fill pump out	1	\$9.99 ea
55	H231	screw, 10-32 x 1" phi pan head, s/s	2	\$0.99 ea
56	H528	bracket, heater mounting, dual	1	\$28.99 ea
57	AH108S	sol hose, 1/4" x 24 1/2", (OAL)	1	\$26.49 ea
58	AH155E	hose, 3/8" x 6.5", (OAL), f, f, f, 5400 Gony	1	\$23.99 ea
59	E571	heating rod, 600W, 115v	1	\$49.99 ea
60	E574	Thermostat, 310°F ± 10°F, Manual, 1/4"	1	\$17.99 ea
61	H274	screw, #6 x 3/16", phi pan head, self-tapping	10	\$0.99 ea
62	E573	Thermostat, 200°, Auto, 1/4"	2	\$16.49 ea
63	E519	heating rod, 1000W, 115v	1	\$15.99 ea
64	H003A	heater, aluminum cast, single	2	\$78.99 ea
65	B129	nipple, hex, 1/8" mpt x 1/8" mpt	2	\$1.99 ea
66	H325	flow meter, electric, truck mount	1	\$189.99 ea

Order parts at: www.mytee.com/products/product.php?id=LTD3

Part prices are subject to change.


SPEEDSTER® LTD3 PARTS & PRICING

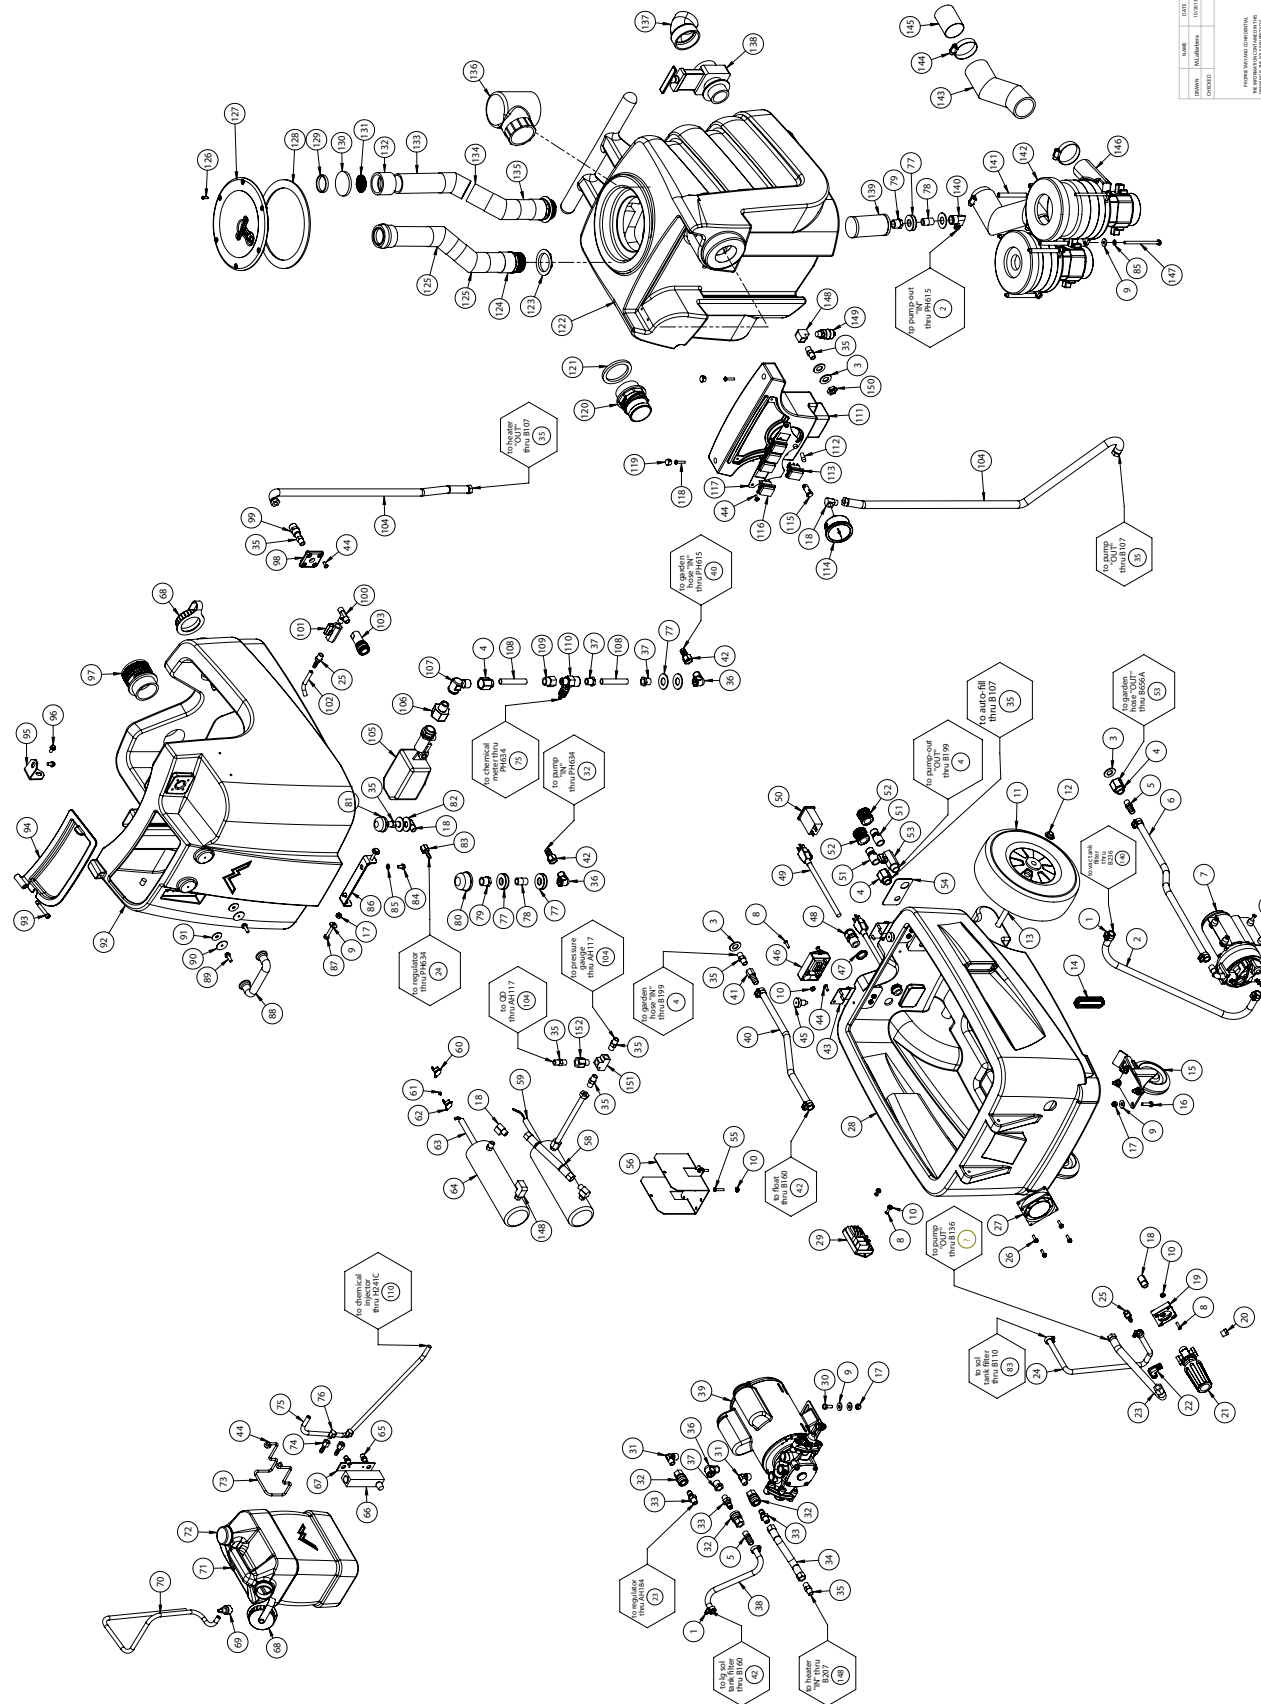

REV	DATE	DESCRIPTION
1	08/01/13	ISSUE 1
2	08/01/13	ISSUE 2
3	08/01/13	ISSUE 3
4	08/01/13	ISSUE 4
5	08/01/13	ISSUE 5
6	08/01/13	ISSUE 6
7	08/01/13	ISSUE 7
8	08/01/13	ISSUE 8
9	08/01/13	ISSUE 9
10	08/01/13	ISSUE 10
11	08/01/13	ISSUE 11
12	08/01/13	ISSUE 12
13	08/01/13	ISSUE 13
14	08/01/13	ISSUE 14
15	08/01/13	ISSUE 15
16	08/01/13	ISSUE 16
17	08/01/13	ISSUE 17
18	08/01/13	ISSUE 18
19	08/01/13	ISSUE 19
20	08/01/13	ISSUE 20
21	08/01/13	ISSUE 21
22	08/01/13	ISSUE 22
23	08/01/13	ISSUE 23
24	08/01/13	ISSUE 24
25	08/01/13	ISSUE 25
26	08/01/13	ISSUE 26
27	08/01/13	ISSUE 27
28	08/01/13	ISSUE 28
29	08/01/13	ISSUE 29
30	08/01/13	ISSUE 30
31	08/01/13	ISSUE 31
32	08/01/13	ISSUE 32
33	08/01/13	ISSUE 33
34	08/01/13	ISSUE 34
35	08/01/13	ISSUE 35
36	08/01/13	ISSUE 36
37	08/01/13	ISSUE 37
38	08/01/13	ISSUE 38
39	08/01/13	ISSUE 39
40	08/01/13	ISSUE 40
41	08/01/13	ISSUE 41
42	08/01/13	ISSUE 42
43	08/01/13	ISSUE 43
44	08/01/13	ISSUE 44
45	08/01/13	ISSUE 45
46	08/01/13	ISSUE 46
47	08/01/13	ISSUE 47
48	08/01/13	ISSUE 48
49	08/01/13	ISSUE 49
50	08/01/13	ISSUE 50
51	08/01/13	ISSUE 51
52	08/01/13	ISSUE 52
53	08/01/13	ISSUE 53
54	08/01/13	ISSUE 54
55	08/01/13	ISSUE 55
56	08/01/13	ISSUE 56
57	08/01/13	ISSUE 57
58	08/01/13	ISSUE 58
59	08/01/13	ISSUE 59
60	08/01/13	ISSUE 60
61	08/01/13	ISSUE 61
62	08/01/13	ISSUE 62
63	08/01/13	ISSUE 63
64	08/01/13	ISSUE 64
65	08/01/13	ISSUE 65
66	08/01/13	ISSUE 66
67	08/01/13	ISSUE 67
68	08/01/13	ISSUE 68
69	08/01/13	ISSUE 69
70	08/01/13	ISSUE 70
71	08/01/13	ISSUE 71
72	08/01/13	ISSUE 72
73	08/01/13	ISSUE 73
74	08/01/13	ISSUE 74
75	08/01/13	ISSUE 75
76	08/01/13	ISSUE 76
77	08/01/13	ISSUE 77
78	08/01/13	ISSUE 78
79	08/01/13	ISSUE 79
80	08/01/13	ISSUE 80
81	08/01/13	ISSUE 81
82	08/01/13	ISSUE 82
83	08/01/13	ISSUE 83
84	08/01/13	ISSUE 84
85	08/01/13	ISSUE 85
86	08/01/13	ISSUE 86
87	08/01/13	ISSUE 87
88	08/01/13	ISSUE 88
89	08/01/13	ISSUE 89
90	08/01/13	ISSUE 90
91	08/01/13	ISSUE 91
92	08/01/13	ISSUE 92
93	08/01/13	ISSUE 93
94	08/01/13	ISSUE 94
95	08/01/13	ISSUE 95
96	08/01/13	ISSUE 96
97	08/01/13	ISSUE 97
98	08/01/13	ISSUE 98
99	08/01/13	ISSUE 99
100	08/01/13	ISSUE 100


mytee PRODUCTS, INC.
 speedster
 LTD3
 SCALE 1:2
 SHEET 2 OF 3

SPEEDSTER® LTD3 WIRING DIAGRAM

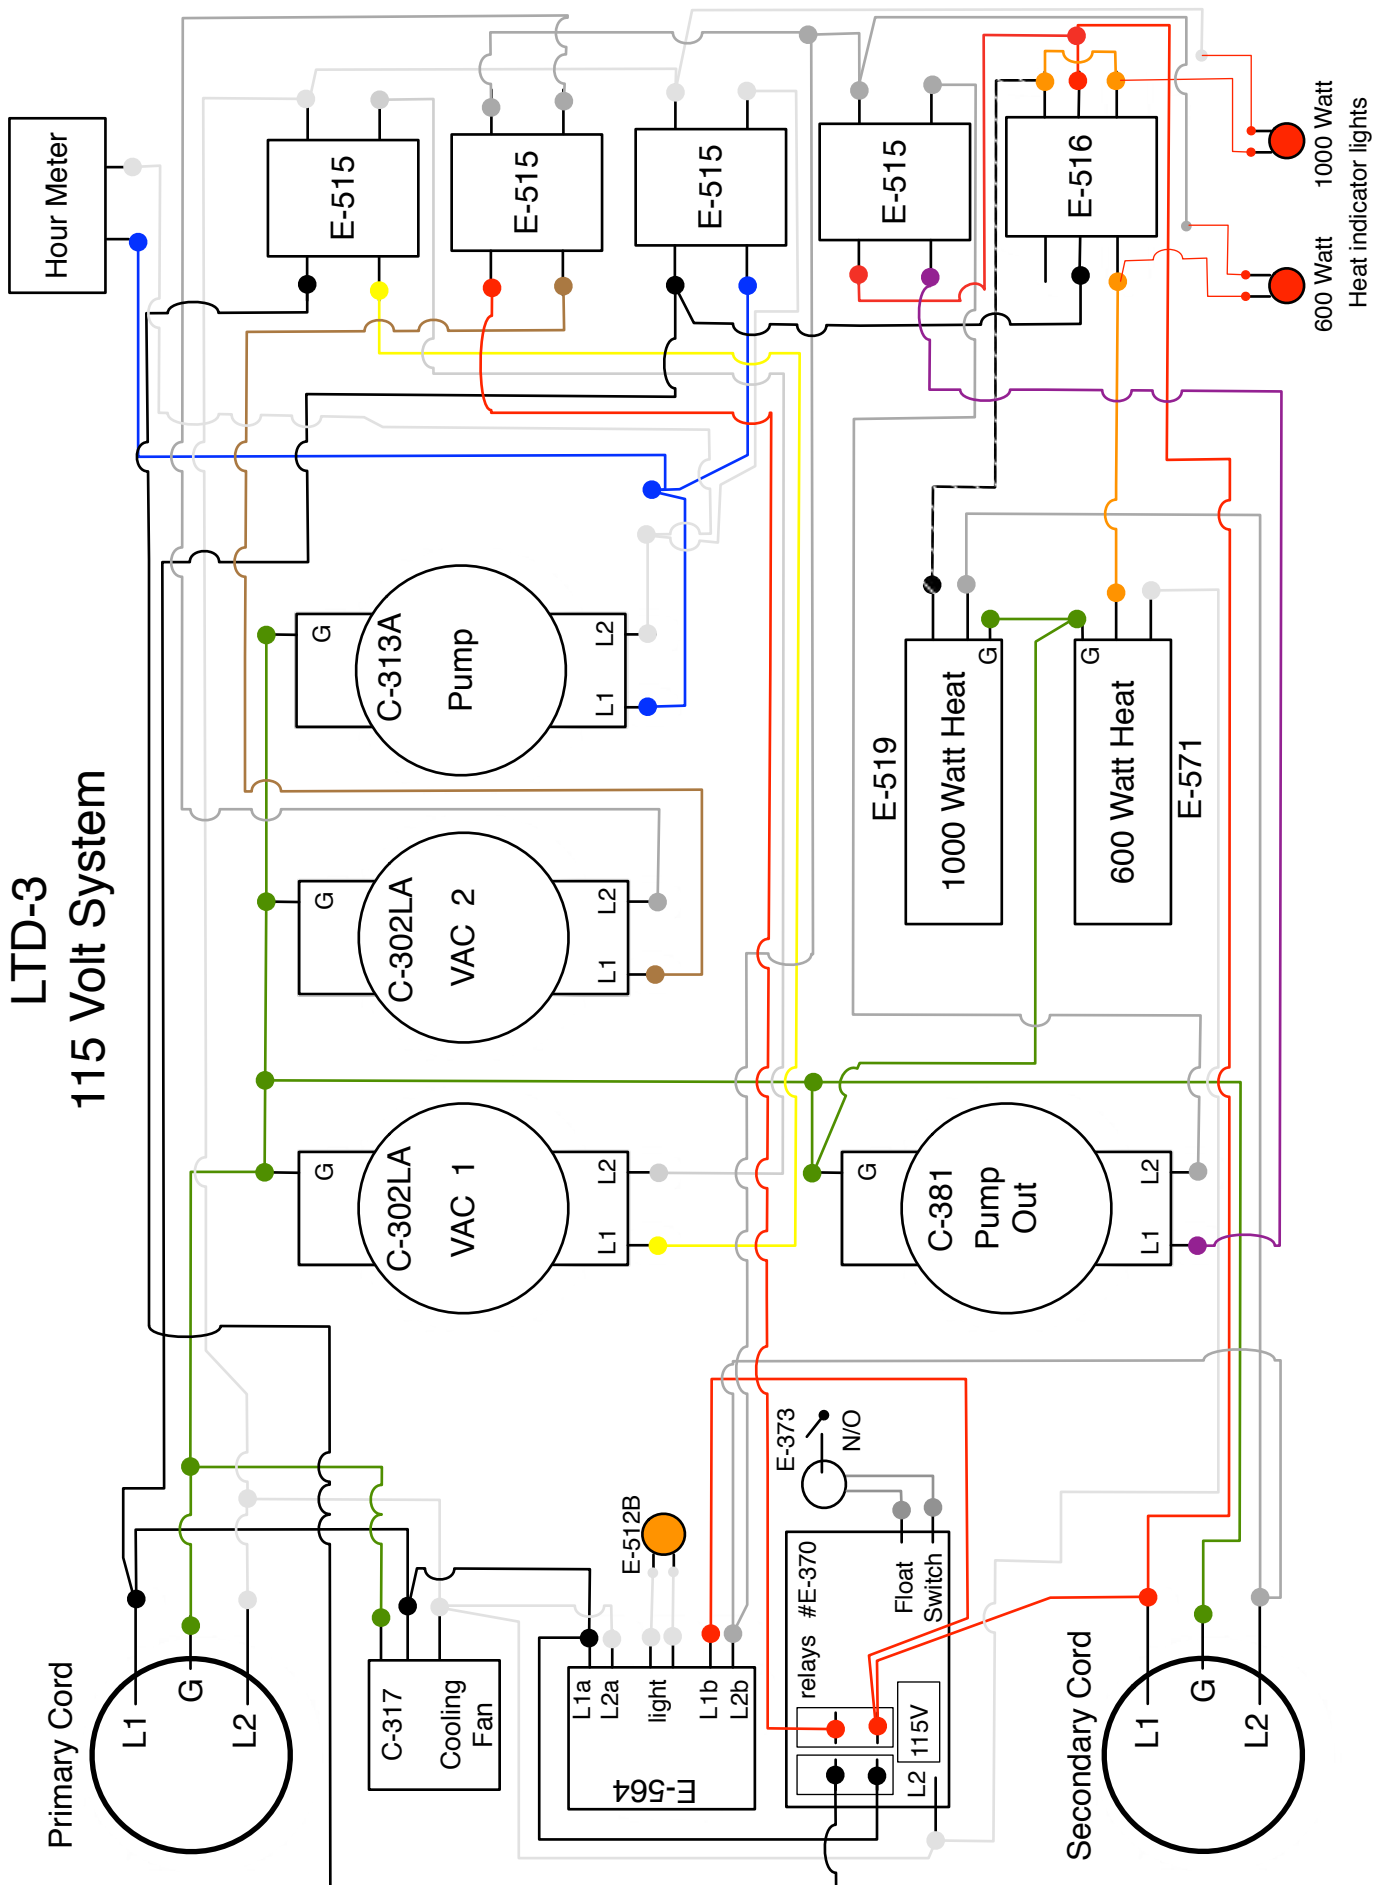


Color diagram at: www.mytee.com/products/product.php?id=LTD3

SPEEDSTER® LTD5 FRONT

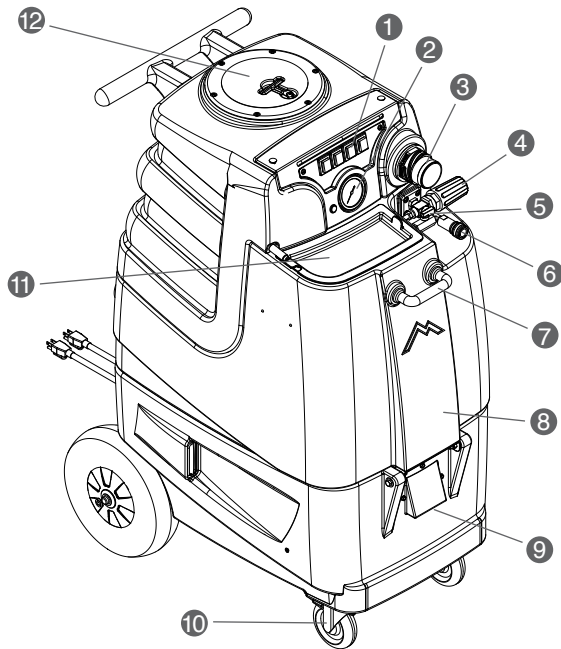


- | | |
|-----------------------------|------------------------|
| 1. Switch Plate | 7. Front Handle |
| 2. PSI Gauge | 8. Solution Tank |
| 3. 2" Male Cuff-Lynx™ Inlet | 9. Front Vent |
| 4. Pressure Regulator | 10. 4" Locking Casters |
| 5. Prime Valve | 11. Solution Lid |
| 6. Female Quick Disconnect | 12. Recovery Lid |

SPEEDSTER® LTD5 BACK

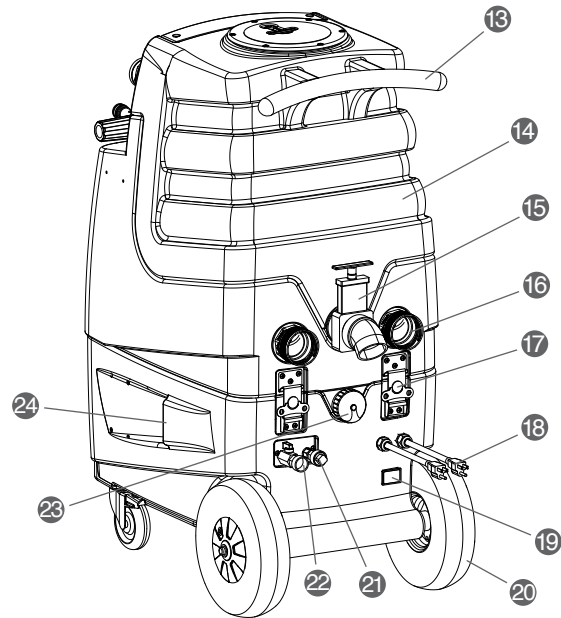


- | | |
|-------------------------------|---|
| 13. Push Handle | 19. Hour Meter |
| 14. Recovery Tank | 20. 10" foam filled semi-pneumatic wheels |
| 15. Recovery Tank Drain Valve | 21. Auto Fill Connection |
| 16. Rear Vacuum Exhaust | 22. Pump Out Hose Connection |
| 17. Service Latches | 23. Solution Tank Drain |
| 18. Power cords | 24. Side vent |

SPEEDSTER® LTD5 ITEMS INCLUDED

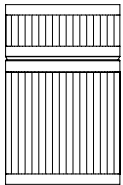


H110 Cuff-Lynx™
2" x 2" Hose Adapter

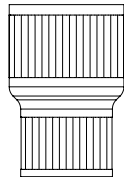

H141 Cuff-Lynx™
2" x 1.5" Hose Reducer



G008 - Pack of Piglet™
filters

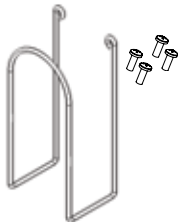

H375- Hose Hanger
(4) screws




H226 Drain Elbow

SPEEDSTER® LTD5 CORDS


(Primary) Right Cord: Plug in yellow-tagged power cable for Power To Vac 1, & Pump.

(Secondary) Left Cord: Plug in power cable for Vac 2 and the Pump-Out.

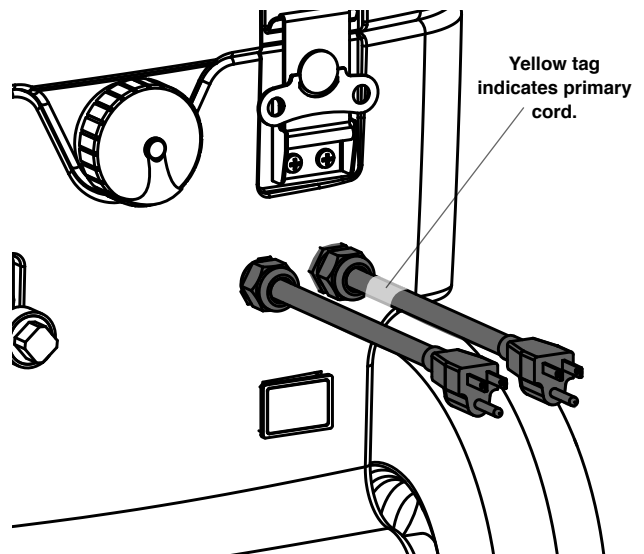


Plug each power cord into a separate, 20A grounded wall outlet. **Outlets must be on two separate breakers.** When the amber light on the switch plate illuminates, the machine is on separate circuits (not necessarily 20A circuits). You can identify the primary cord by the yellow tag.

SPEEDSTER® LTD5 VAC/SOL HOSE CONNECTIONS

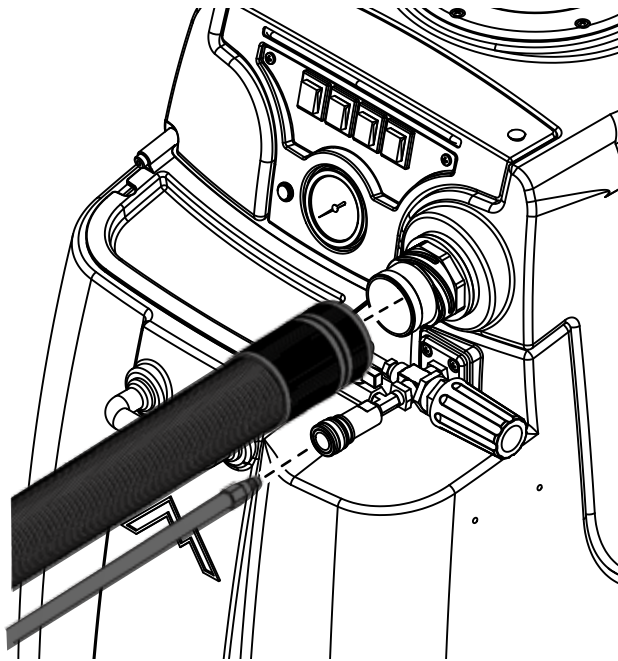


Attach female end of a solution hose to a wand or tool and the male end to the LTD's QD. Then connect a vacuum hose to a wand and the 2" male Cuff-Lynx™ hose port. (If using the optional de-foamer, install the kit onto the vacuum port according to the instructions that come with the de-foamer kit.)

SPEEDSTER® LTD5 SWITCHES

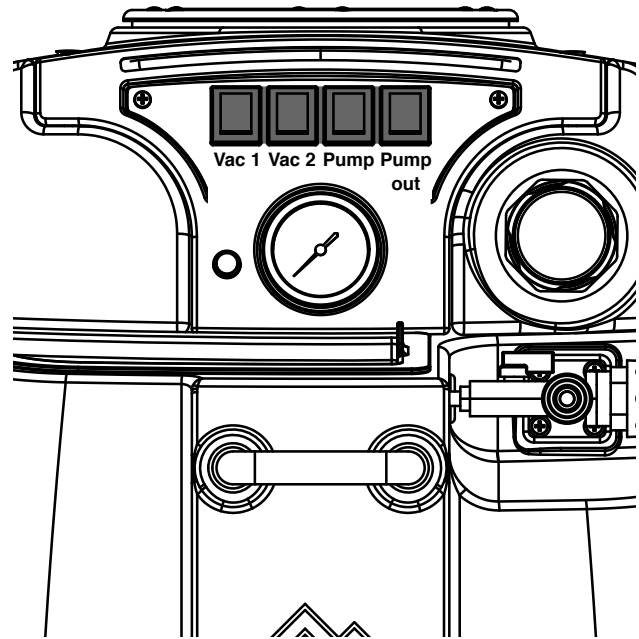

To use vacuum, turn on Vac 1 and Vac 2. To use pump, turn on Pump. To use pump-out, turn on Pump-Out switch.


SPEEDSTER® LTD5 PRIME VALVE & PRESSURE REGULATOR

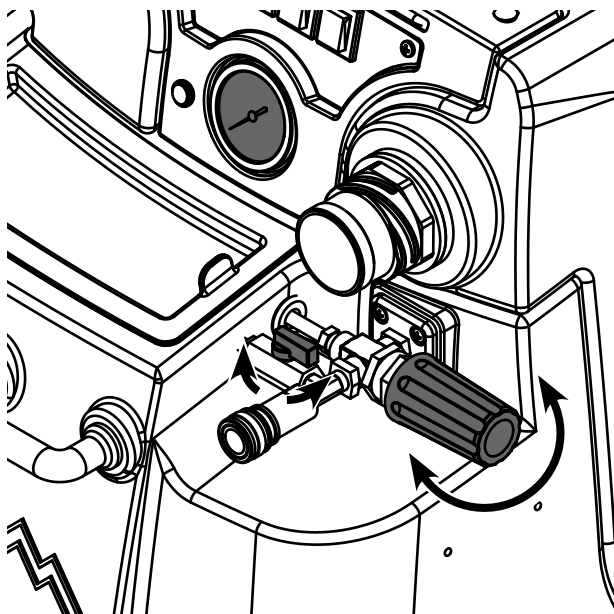

Prime the pump by having the Prime Valve parallel with its pipe and turn it clock-wise to run the pump. Turning the Pressure Regulator to its left will decrease water pressure and turning to the right will increase water pressure.


*Please refer to the Pressure Gauge to monitor your water pressure.

SPEEDSTER® LTD5 FILL SOLUTION TANK

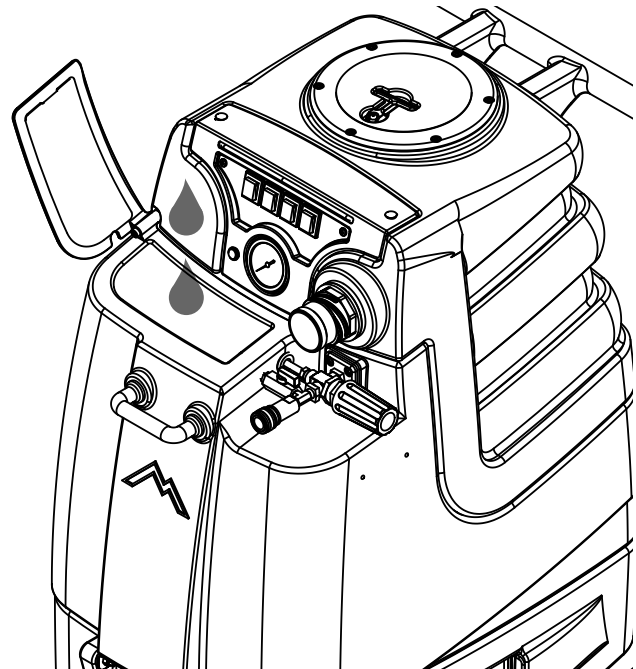


You can lift the lid to manually fill the tank or follow the "Operating Instructions" for auto-fill use.

**SPEEDSTER® LTD5
FLOAT SWITCHES**

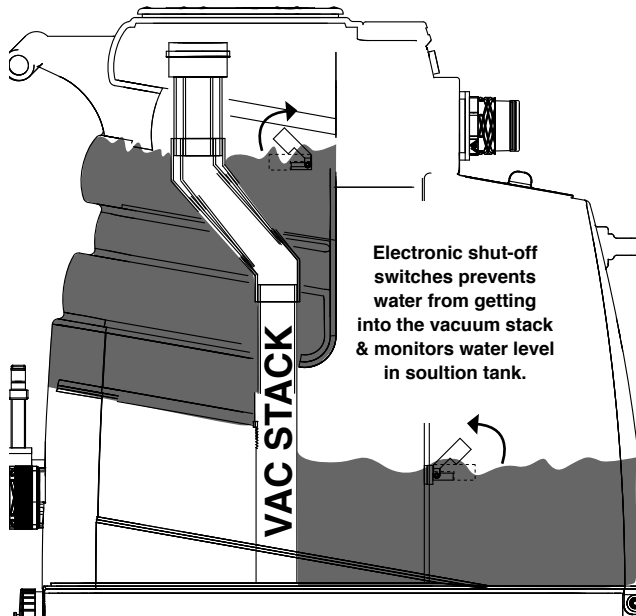


The LTD is equipped with an electronic float switch inside the recovery and solution tank. The recovery float switch is activated by rising water to prevent suction into the vacuum stacks damaging the motors. The solution float switch shuts off the auto-fill once water level reaches switch.

SPEEDSTER® LTD5 AUTO-FILL CONNECTIONS

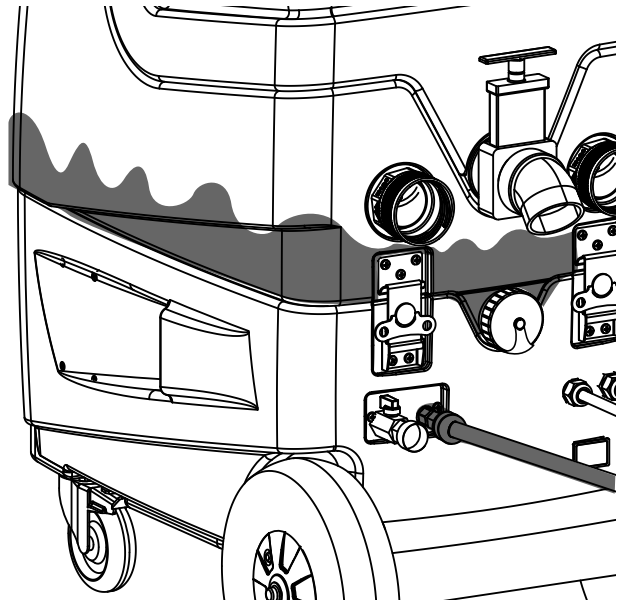


Using one end of a 1/2" garden hose, attach it to the mounted connection behind the LTD unit, then attach the other end to the desired faucet connection. Turn on the faucet water and let the auto-fill begin to fill. It will shut off when the water level reaches the LTD's electronic float switch.

SPEEDSTER® LTD5 PUMP-OUT CONNECTIONS

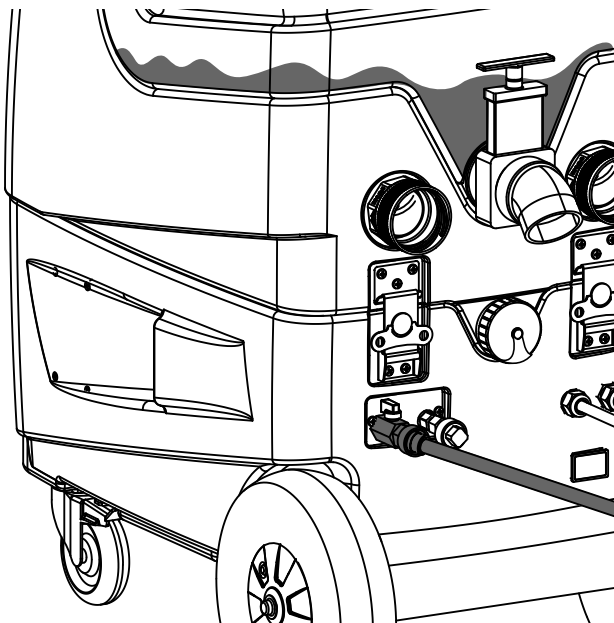


Using a separate 1/2" garden hose, attach one end to the LTD's mounted pump-out connection and lay the other end of the hose in a drainable location. With the pump-out switch activated and the valve parallel with its pipe, the unit will automatically drain water from the fill tank while the auto-fill maintains water levels. Make sure ball valve is open!

SPEEDSTER® LTD5 RECOVERY DRAIN VALVE

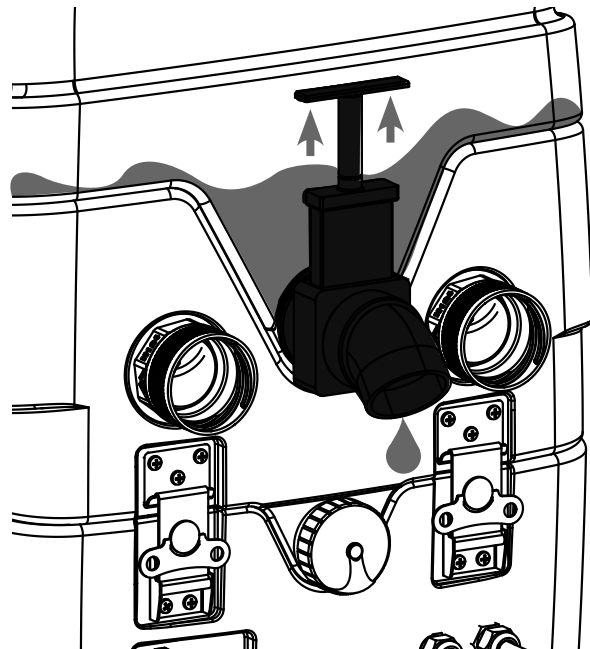


Make sure the Auto-Fill is turned off and then locate and lift the bucket high drain valve on the rear of the LTD unit to empty the tanks.

SPEEDSTER® LTD5 SOLUTION TANK DRAIN VALVE

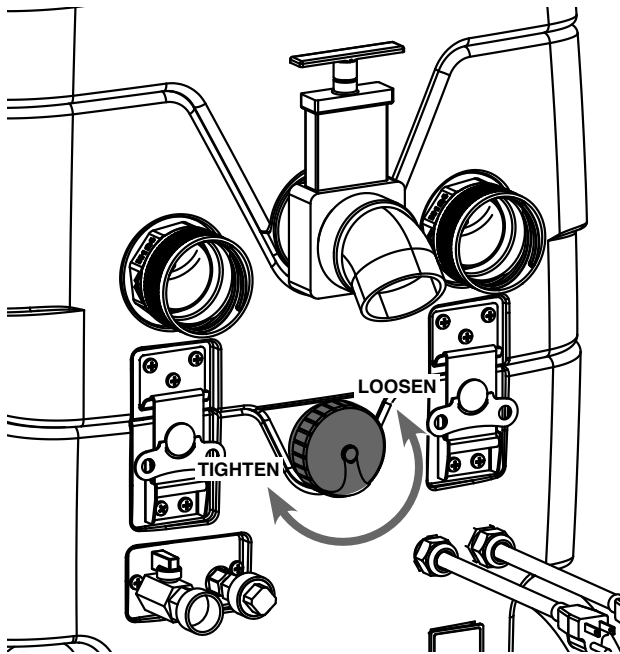


To remove any remaining water in the solution tank, located on the back of the unit is a cap, twist and remove cap to empty tank.

SPEEDSTER® LTD5 FILTER MAINTENANCE

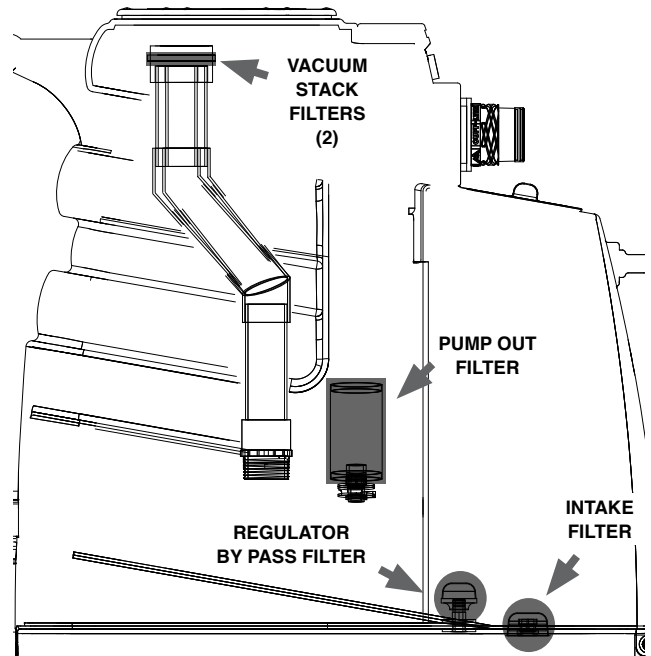


The LTD's five internal filters must be cleaned regularly and are located in the locations listed in the following diagram. Twist the filters to remove them then clean and replace in original locations. If a filter is torn or damaged, replace with a new one.

SPEEDSTER® LTD5 TANK LATCHES & PUMP HOUR METER

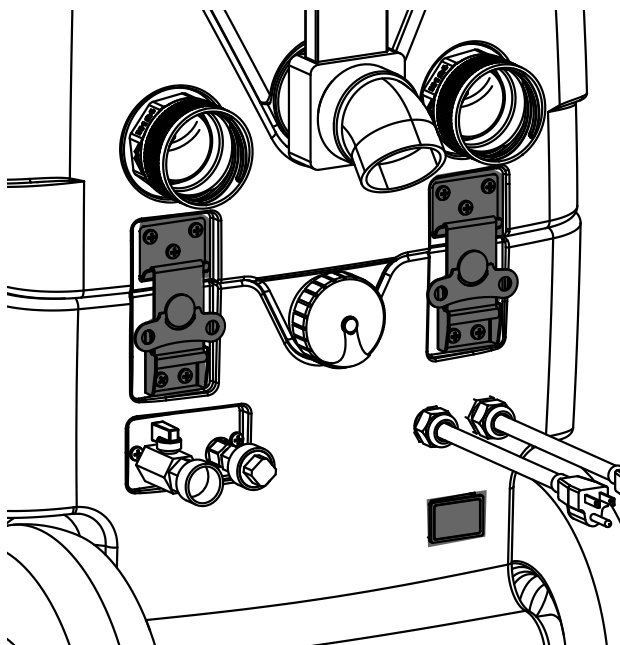


The rear latches can be unlatched from the lower half of the unit to open it for internal repairs and cleaning. To unlatch, flip and twist latches. The hour meter activates when the pump is turned on. This helps monitor usage and when to make oil changes. Refer to p.24 for oil maintenance instructions.

MYTEE® SYSTEM MAINTAINER

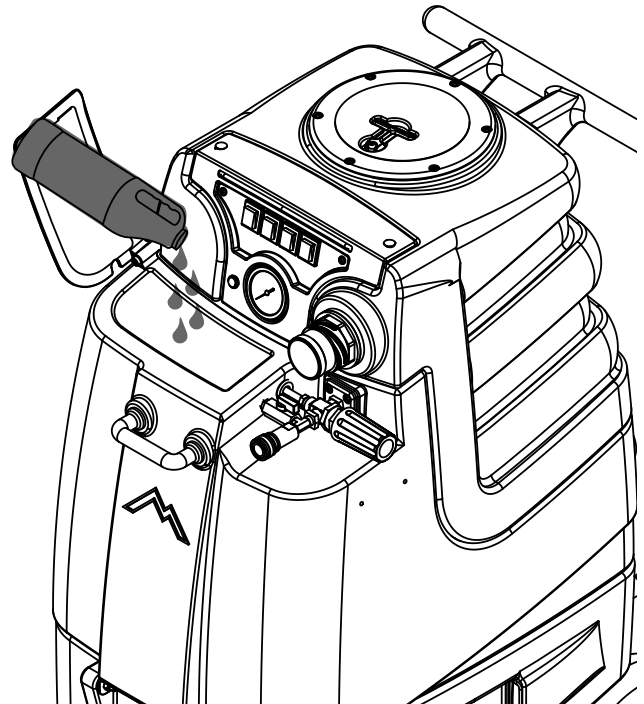

Weekly flushing of the solution system with Mytee System Maintainer helps keep lines clean and prevents chemical build-up, improving pump life, performance, and pressure.

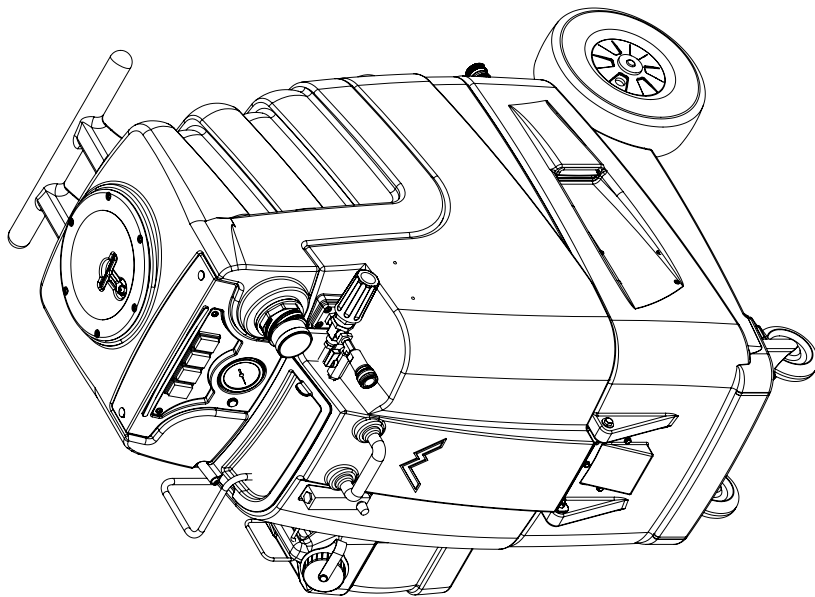


ITEM NO.	PART NO.	DESCRIPTION	QTY.	MSRP
81	G052	washer, buna 1-1/8" o.d.x 3/16" id	2	\$1.99 ea
82	H211	washer, 1/4" x 1" o.d. flat, s/s	2	\$0.99 ea
83	P909	LX series sol tank	1	\$141.95 ea
84	H650	bolt, 5/16" shoulder x 1-1/2" lg. alloy	1	\$0.99 ea
85	P513	solution tank lid, LTD	1	\$9.00 ea
86	H390A	bracket, "L"	2	\$6.99 ea
87	H770	bolt, 1/4-20 x 1/2" serrated hex flange, zinc	4	\$0.99 ea
88	H124	Cuff-Lynx, 2" mpt x 2" female cuff	2	\$3.99 ea
89	PH634-20	sol hose, 1/4", 300 PSI	1	\$6.49 ft
90	C313C	regulator, 450 psi, silver spring	1	\$86.99 ea
91	H484	plate, mounting, OD	1	\$4.99 ea
92	AH117	hose, pulke, black, 1/4" fowl x 1/4" fowl, 407' (OAL)	1	\$19.99 ea
93	AH117	hose, pulke, black, 1/4" fowl x 1/4" fowl, 487' (OAL)	1	\$5.49 ea
94	AH117	hose, pulke, black, 1/4" fowl x 1/4" fowl, 487' (OAL)	1	\$19.99 ea
95	B102	qd. brass, 1/4" f	1	\$17.99 ea
96	B656	ball valve, 1/4"	1	\$13.49 ea
97	PH632-36	sol hoses, 1/4", 200 PSI	1	\$6.49 ft
98	H680D	gauge, pressure, 2000 PSI	1	\$8.99 ea
99	E512B	light, indicator, 125v (ambuser)	1	\$9.99 ea
100	H074	plate, switch, tds, 1012	1	\$6.00 ea
101	E515	switch, rocker, 2 position	4	\$13.99 ea
102	H029	plate, screw, 10 x 1/2"	2	\$0.99 ea
103	P512	LX series switchbox	1	\$24.00 ea
104	H031	plastic screw, 10 x 1"	2	\$0.99 ea
105	H434	plug, vent, hvyco, 1/2"	2	\$4.48 ea
106	H135	Cuff-Lynx, 2" m cuff x 2" mpt	1	\$3.99 ea
107	G083	gasket, 2" inlet	2	\$2.49 ea
108	H314	nut, lock, 1-1/2" steel	2	\$1.99 ea
109	P200	adapter, pvc, 1-1/2" mpt x 1-1/2" fms	2	\$2.99 ea
110	P903	adapter, 1.5" pvc, 45 deg, 5/8" x 1/2" slip	4	\$3.29 ea
111	G090	lid, vac tank, clear, 7"	1	\$36.99 ea
112	H304	screw, #8 x 5/8 phi oval, s/s	6	\$0.99 ea
113	G091	gasket, 7", vac lid	1	\$11.99 ea
114	PH633-1	pipe pvc, 1-1/2"	2	\$4.99 ft
115	G022	filter foam, 2.3/8" x 1"	2	\$2.99 ea
116	G097	screen, mesh filter, 1-1/2" dia	2	\$4.49 ea
117	P903	adapter, 1.5" pvc, 5/8" x 1/2" slip	2	\$5.00 ea
118	PH633-06	PPE, 1-1/2" x 6' PVC	2	\$4.99 ft
119	PH633-03	pipe pvc, 1-1/2"	2	\$4.99 ft
120	PH633-4	pipe pvc, 1-1/2"	2	\$4.99 ft
121	A026	elbow, inlet assembly, 2"	1	\$15.99 ea
122	H225	valve, drain, 1-1/2"	1	\$20.99 ea
123	H226	spout, drain, 45 degree	1	\$3.19 ea
124	P510	LX series vac tank	1	\$99.99 ea
125	H333	mesh filter, auto dump, 1/2" npt	1	\$12.99 ea
126	B206	elbow, brass, 90 deg, 1/2" barb x 3/8" fpt	1	\$14.49 ea
127	H503	vac support, 3 stage, 3.25", no treads	6	\$3.99 ea
128	G004	gasket, vac motor-Speedster	2	\$8.99 ea
129	H217	clamp, hose, 2-1/4 dia	4	\$1.49 ea
130	H194	coupler, 2" dia x 2.5" length, s/s	2	\$10.00 ea
131	PH626-7	vac hose, 2", black, wire reinforced	2	\$8.99 ft
132	H096	both 1/4-20 x 4, s/s	6	\$0.99 ea
133	C302A	vac motor, 3-stage hp, 120V, 145"	1	\$148.99 ea
134	B207	elbow, brass, 90 deg, 1/4" fpt x 1/4" fpt	1	\$5.99 ea
135	E323	level switch, vacuum shut-off, rear threads	1	\$13.99 ea
136	B156	nut, 1/4" npt	1	\$1.99 ea

ITEMS NOT SHOWN

PART NO.	DESCRIPTION	QTY.	MSRP
E332	LED strip light, with lead wires	1	\$26.99 ea
E530	power cord, ext 50', 12/3, black	2	\$74.99 ea
G008	piggy filter	1	\$6.29 ea
G076	filter bag, 3.5" metal o-ring, mesh bag	1	\$4.99 ea
H110	Cuff-Lynx, 2" hose x 2" fem swivel	1	\$3.99 ea
H141	Cuff-Lynx, 2" hose x 2" female thread	1	\$3.99 ea
H420	screw, 10-32 x 1/2" phi pan head, s/s	2	\$0.99 ea
H325	hanger, wire formed, hose	1	\$10.99 ea
A0127	app sign, register your product	1	\$2.00 ea
ADM/Cuff Lynx	Cuff-Lynx instruction guide	1	n/a


ITEM NO.	PART NO.	DESCRIPTION	QTY.	MSRP
1	H212	fltr washer, 9/16" x 1 1/16" O.D., AN966-C16	4	\$0.99 ea
2	B199	coupler, 1/2" fpt x 1/4" fpt	3	\$8.99 ea
3	B644	adapter, brass, 1/2" barb x 1/4" mpt	2	\$2.49 ea
4	H347	clamp, hose, 5/16-29-32	14	\$1.99 ea
5	PH615-9	sol hose, 1/2", 3045psi, black	1	\$8.99 ft
6	H273	nut, kep, # 10-32 zinc	16	\$0.99 ea
7	H210	washer, 1/4" flat, s/s	30	\$0.99 ea
8	H186	screw, 10-32 x 3/4" phi flat full thread	8	\$0.99 ea
9	C381	pump out, 115v	1	\$187.49 ea
10	PH615-37	sol hose, 1/2", 3045psi, black	1	\$8.99 ea
11	H219	cap, axle, 1/2"	2	\$0.99 ea
12	H109	wheel, 10", foam filled	2	\$79.99 ea
13	H232	axle, 19 60" x .50"	1	\$0.99 ea
14	P514	LX series base	2	\$106.99 ea
15	P514	vert side, LTD	2	\$5.00 ea
16	H468	cover, 4", black, hub & grip, head	2	\$19.49 ea
17	H352	bolt, 1/4-20 x 1", hex head, s/s	8	\$0.99 ea
18	H216	nut, lock, 1/4-20, nylon insert, s/s	14	\$0.99 ea
19	C317	fan, cooling, 115v	1	\$21.49 ea
20	H343	screw, 10-32 x 5/8" hex head, zinc	4	\$0.99 ea
21	E370	controller, water level, dual pump or vac	1	\$94.99 ea
22	H202	bolt, 1/4-20 x 3/4" hex head	4	\$0.99 ea
23	B246	plug, brass, 3/8" mpt, hex	1	\$1.99 ea
24	PH615-23	sol hose, 1/2", 3045psi, black	1	\$8.99 ft
25	B160	adapter, brass, 1/2" barb x 3/8" fsw, ball end	2	\$3.49 ea
26	B186	elbow, brass, 90 deg, 3/8" mpt x 3/8" fpt	3	\$8.99 ea
27	B105	bushing, brass, 3/8" mpt x 1/4"	4	\$3.19 ea
28	B260A	qd. brass, 1/4" mpt x 1/4"	2	\$8.99 ea
29	B259A	qd. brass, 1/4" fgd x mpt	2	\$15.99 ea
30	C313A	pump, CAT, 50-500 PSI, 120/240v	1	\$599.99 ea
31	B652	elbow, brass, 90 deg, 3/8" mpt x 1/4" mpt	1	\$8.49 ea
32	AH184	hose, pulke, blk, 497' (OAL), 1/4" fowl x 1/4" fowl	1	\$19.99 ea
33	B107	nipple, brass, 1/4" m, hex	5	\$3.19 ea
34	B113	tee, brass, 1/4" fpt	1	\$6.99 ea
35	B643	adapter, brass, 3/8" fpt x 1/4" mpt	1	\$4.99 ea
36	PH615-32	sol hose, 1/2", 3045psi, black	1	\$8.99 ft
37	B123	adapter, brass, 1/2" barb x 1/4" fpt	1	\$6.99 ea
38	G068	bumper, 7/8" x 1/4" head	2	\$1.99 ea
39	H486	batch, front breeze	2	\$13.99 ea
40	H230	screw, 10-32 x 1/2" phi pan head, s/s	20	\$0.99 ea
41	H221	nut, lock, 1/2" steel	2	\$1.99 ea
42	H220	fitting, strain relief, cord	2	\$3.19 ea
43	E550	power cord, digital, 30', 12/3, black	2	\$11.49 ea
44	E564	controller, circuit light	1	\$62.99 ea
45	E569	hour meter, panel mount, analog	1	\$35.99 ea
46	H039	plate, auto fill pump out	1	\$9.99 ea
47	B205B	qd, 1/2" mpt x 3/4" mpt, pump-out	2	\$3.99 ea
48	B204	qd, 3/4" female x female garden hose	2	\$9.99 ea
49	B656A	ball valve, 1/2" m x 1/2" f	1	\$16.49 ea
50	H209	washer, 1 1/16" dia x 1 1/2" o.d. x .075, s/s	9	\$0.99 ea
51	B303	nipple, 3" x 1/4" mpt x 1/4" mpt	2	\$8.99 ea
52	B208	chemical injector	1	\$8.99 ea
53	H541C	coupling, 3/8" fpt x 1/4" fpt	1	\$39.99 ea
54	B167	street elbow, 1/2" fpt x 1/2" mpt	1	\$10.99 ea
55	B198	coupler, 3/4" fpt x 1/2" mpt	1	\$16.99 ea
56	H541A	valve, float, automatic	1	\$103.00 ea
57	B109	adapter, brass, 1/4" barb x 1/4" mpt	2	\$1.99 ea
58	B103	elbow, brass, 90 deg, 1/2" mpt x 1/4" fpt	1	\$4.49 ea
59	B216	nipple, brass, 3/8" x close	2	\$1.99 ea
60	B210	bushing, brass, 1/2" mpt x 3/8" fpt, hex	2	\$2.49 ea
61	B119A	filter, strainer, 1/2"	1	\$6.49 ea
62	H213	washer, 1/4" lock, s/s	1	\$0.99 ea
63	H201	bolt, 1/4-20 x 1/2", hex head, zinc	2	\$0.99 ea
64	H378	bracket, front hinge, spfb	1	\$8.99 ea
65	H204	bolt, 1/4-20 x 1 3/4", hex head, s/s	2	\$0.99 ea
66	PH634-18	sol hose, 1/4", silicone braided, clear	1	\$6.49 ea
67	B131	fitting, 1/4" barb x 1/8" FPT	2	\$2.99 ea
68	B143	street elbow, 90 degrees, 1/8"	2	\$2.99 ea
69	B129	nipple, hex, 1/8" mpt x 1/8" mpt	1	\$1.99 ea
70	H325	flow meter, electric truck mount	1	\$189.99 ea
71	G069	gasket, flow meter	1	\$0.99 ea
72	H246	screw, 8-32 x 3/8" SHCS, alloy Black	2	\$0.99 ea
73	H537	hanger, wire for injection sprayer	1	\$7.49 ea
74	G036	cap, 2.5" threaded, ethered	2	\$3.49 ea
75	B154	bottle, 7 quart, w caps	1	\$17.99 ea
76	B117	strainer, with check, chemical injector	1	\$18.99 ea
77	H466B	cap, gallon jug, 1.5g	1	\$0.99 ea
78	PH634-26	sol hose, 1/4", silicone braided, clear	1	\$6.49 ea
79	H465	handle, breeze and dx	1	\$6.99 ea
80	H768	bolt, 1/4-20 x 3/4" serrated hex flange, zinc	2	\$0.99 ea

SPEEDSTER® LTD5 PARTS & PRICING

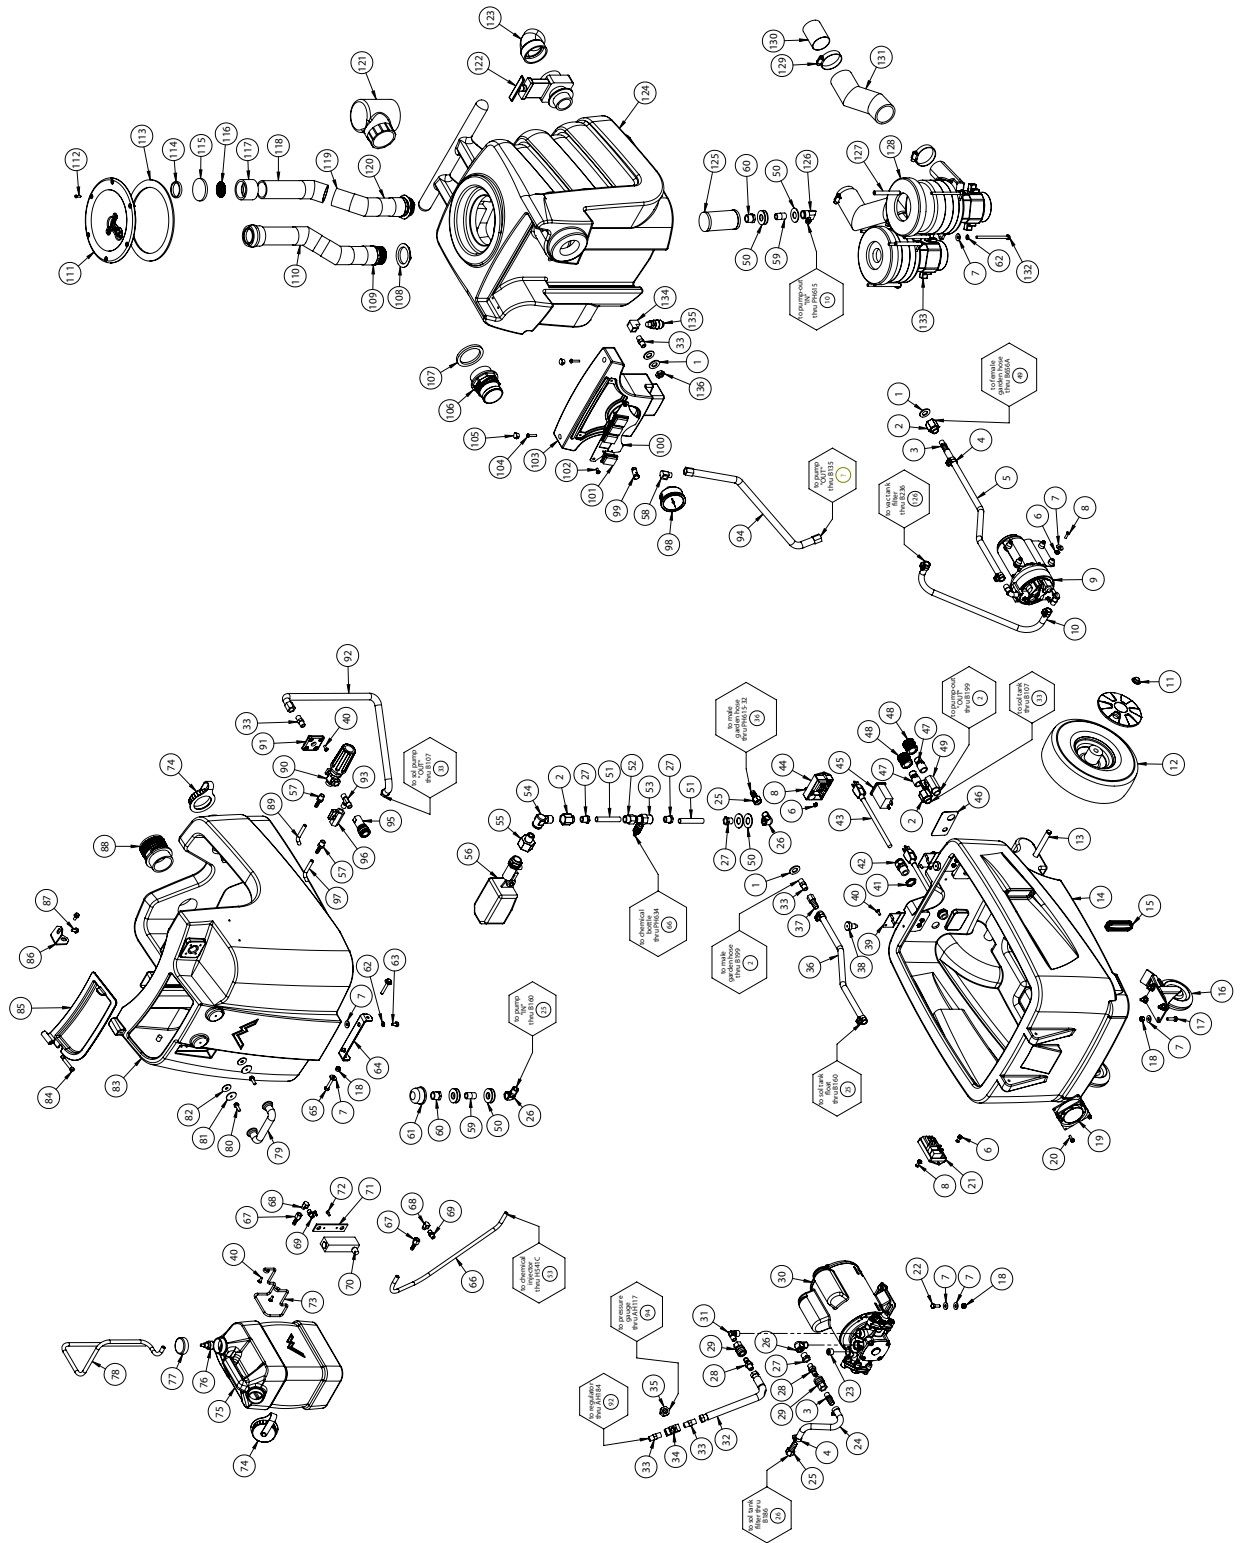


DATE:	REV:	TITLE:	mytee PRODUCTS, INC.
DRAWN:	DATE:	SCALE:	
CHECKED:	APPROVED:		
COMMENTS: 1. THIS DRAWING IS FOR INFORMATION ONLY. 2. THIS DRAWING IS FOR INFORMATION ONLY. 3. THIS DRAWING IS FOR INFORMATION ONLY. 4. THIS DRAWING IS FOR INFORMATION ONLY. 5. THIS DRAWING IS FOR INFORMATION ONLY. 6. THIS DRAWING IS FOR INFORMATION ONLY. 7. THIS DRAWING IS FOR INFORMATION ONLY. 8. THIS DRAWING IS FOR INFORMATION ONLY. 9. THIS DRAWING IS FOR INFORMATION ONLY. 10. THIS DRAWING IS FOR INFORMATION ONLY. 11. THIS DRAWING IS FOR INFORMATION ONLY. 12. THIS DRAWING IS FOR INFORMATION ONLY. 13. THIS DRAWING IS FOR INFORMATION ONLY. 14. THIS DRAWING IS FOR INFORMATION ONLY. 15. THIS DRAWING IS FOR INFORMATION ONLY. 16. THIS DRAWING IS FOR INFORMATION ONLY. 17. THIS DRAWING IS FOR INFORMATION ONLY. 18. THIS DRAWING IS FOR INFORMATION ONLY. 19. THIS DRAWING IS FOR INFORMATION ONLY. 20. THIS DRAWING IS FOR INFORMATION ONLY. 21. THIS DRAWING IS FOR INFORMATION ONLY. 22. THIS DRAWING IS FOR INFORMATION ONLY. 23. THIS DRAWING IS FOR INFORMATION ONLY. 24. THIS DRAWING IS FOR INFORMATION ONLY. 25. THIS DRAWING IS FOR INFORMATION ONLY. 26. THIS DRAWING IS FOR INFORMATION ONLY. 27. THIS DRAWING IS FOR INFORMATION ONLY. 28. THIS DRAWING IS FOR INFORMATION ONLY. 29. THIS DRAWING IS FOR INFORMATION ONLY. 30. THIS DRAWING IS FOR INFORMATION ONLY. 31. THIS DRAWING IS FOR INFORMATION ONLY. 32. THIS DRAWING IS FOR INFORMATION ONLY. 33. THIS DRAWING IS FOR INFORMATION ONLY. 34. THIS DRAWING IS FOR INFORMATION ONLY. 35. THIS DRAWING IS FOR INFORMATION ONLY. 36. THIS DRAWING IS FOR INFORMATION ONLY. 37. THIS DRAWING IS FOR INFORMATION ONLY. 38. THIS DRAWING IS FOR INFORMATION ONLY. 39. THIS DRAWING IS FOR INFORMATION ONLY. 40. THIS DRAWING IS FOR INFORMATION ONLY. 41. THIS DRAWING IS FOR INFORMATION ONLY. 42. THIS DRAWING IS FOR INFORMATION ONLY. 43. THIS DRAWING IS FOR INFORMATION ONLY. 44. THIS DRAWING IS FOR INFORMATION ONLY. 45. THIS DRAWING IS FOR INFORMATION ONLY. 46. THIS DRAWING IS FOR INFORMATION ONLY. 47. THIS DRAWING IS FOR INFORMATION ONLY. 48. THIS DRAWING IS FOR INFORMATION ONLY. 49. THIS DRAWING IS FOR INFORMATION ONLY. 50. THIS DRAWING IS FOR INFORMATION ONLY. 51. THIS DRAWING IS FOR INFORMATION ONLY. 52. THIS DRAWING IS FOR INFORMATION ONLY. 53. THIS DRAWING IS FOR INFORMATION ONLY. 54. THIS DRAWING IS FOR INFORMATION ONLY. 55. THIS DRAWING IS FOR INFORMATION ONLY. 56. THIS DRAWING IS FOR INFORMATION ONLY. 57. THIS DRAWING IS FOR INFORMATION ONLY. 58. THIS DRAWING IS FOR INFORMATION ONLY. 59. THIS DRAWING IS FOR INFORMATION ONLY. 60. THIS DRAWING IS FOR INFORMATION ONLY. 61. THIS DRAWING IS FOR INFORMATION ONLY. 62. THIS DRAWING IS FOR INFORMATION ONLY. 63. THIS DRAWING IS FOR INFORMATION ONLY. 64. THIS DRAWING IS FOR INFORMATION ONLY. 65. THIS DRAWING IS FOR INFORMATION ONLY. 66. THIS DRAWING IS FOR INFORMATION ONLY. 67. THIS DRAWING IS FOR INFORMATION ONLY. 68. THIS DRAWING IS FOR INFORMATION ONLY. 69. THIS DRAWING IS FOR INFORMATION ONLY. 70. THIS DRAWING IS FOR INFORMATION ONLY. 71. THIS DRAWING IS FOR INFORMATION ONLY. 72. THIS DRAWING IS FOR INFORMATION ONLY. 73. THIS DRAWING IS FOR INFORMATION ONLY. 74. THIS DRAWING IS FOR INFORMATION ONLY. 75. THIS DRAWING IS FOR INFORMATION ONLY. 76. THIS DRAWING IS FOR INFORMATION ONLY. 77. THIS DRAWING IS FOR INFORMATION ONLY. 78. THIS DRAWING IS FOR INFORMATION ONLY. 79. THIS DRAWING IS FOR INFORMATION ONLY. 80. THIS DRAWING IS FOR INFORMATION ONLY. 81. THIS DRAWING IS FOR INFORMATION ONLY. 82. THIS DRAWING IS FOR INFORMATION ONLY. 83. THIS DRAWING IS FOR INFORMATION ONLY. 84. THIS DRAWING IS FOR INFORMATION ONLY. 85. THIS DRAWING IS FOR INFORMATION ONLY. 86. THIS DRAWING IS FOR INFORMATION ONLY. 87. THIS DRAWING IS FOR INFORMATION ONLY. 88. THIS DRAWING IS FOR INFORMATION ONLY. 89. THIS DRAWING IS FOR INFORMATION ONLY. 90. THIS DRAWING IS FOR INFORMATION ONLY. 91. THIS DRAWING IS FOR INFORMATION ONLY. 92. THIS DRAWING IS FOR INFORMATION ONLY. 93. THIS DRAWING IS FOR INFORMATION ONLY. 94. THIS DRAWING IS FOR INFORMATION ONLY. 95. THIS DRAWING IS FOR INFORMATION ONLY. 96. THIS DRAWING IS FOR INFORMATION ONLY. 97. THIS DRAWING IS FOR INFORMATION ONLY. 98. THIS DRAWING IS FOR INFORMATION ONLY. 99. THIS DRAWING IS FOR INFORMATION ONLY. 100. THIS DRAWING IS FOR INFORMATION ONLY. 101. THIS DRAWING IS FOR INFORMATION ONLY. 102. THIS DRAWING IS FOR INFORMATION ONLY. 103. THIS DRAWING IS FOR INFORMATION ONLY. 104. THIS DRAWING IS FOR INFORMATION ONLY. 105. THIS DRAWING IS FOR INFORMATION ONLY. 106. THIS DRAWING IS FOR INFORMATION ONLY. 107. THIS DRAWING IS FOR INFORMATION ONLY. 108. THIS DRAWING IS FOR INFORMATION ONLY. 109. THIS DRAWING IS FOR INFORMATION ONLY. 110. THIS DRAWING IS FOR INFORMATION ONLY. 111. THIS DRAWING IS FOR INFORMATION ONLY. 112. THIS DRAWING IS FOR INFORMATION ONLY. 113. THIS DRAWING IS FOR INFORMATION ONLY. 114. THIS DRAWING IS FOR INFORMATION ONLY. 115. THIS DRAWING IS FOR INFORMATION ONLY. 116. THIS DRAWING IS FOR INFORMATION ONLY. 117. THIS DRAWING IS FOR INFORMATION ONLY. 118. THIS DRAWING IS FOR INFORMATION ONLY. 119. THIS DRAWING IS FOR INFORMATION ONLY. 120. THIS DRAWING IS FOR INFORMATION ONLY. 121. THIS DRAWING IS FOR INFORMATION ONLY. 122. THIS DRAWING IS FOR INFORMATION ONLY. 123. THIS DRAWING IS FOR INFORMATION ONLY.			
SIZE:	DATE:	REV:	
D:	LTD 5	G	
SCALE:	1:24	WEIGHT:	SHEET 2 OF 3

LTD-5
115 Volt System

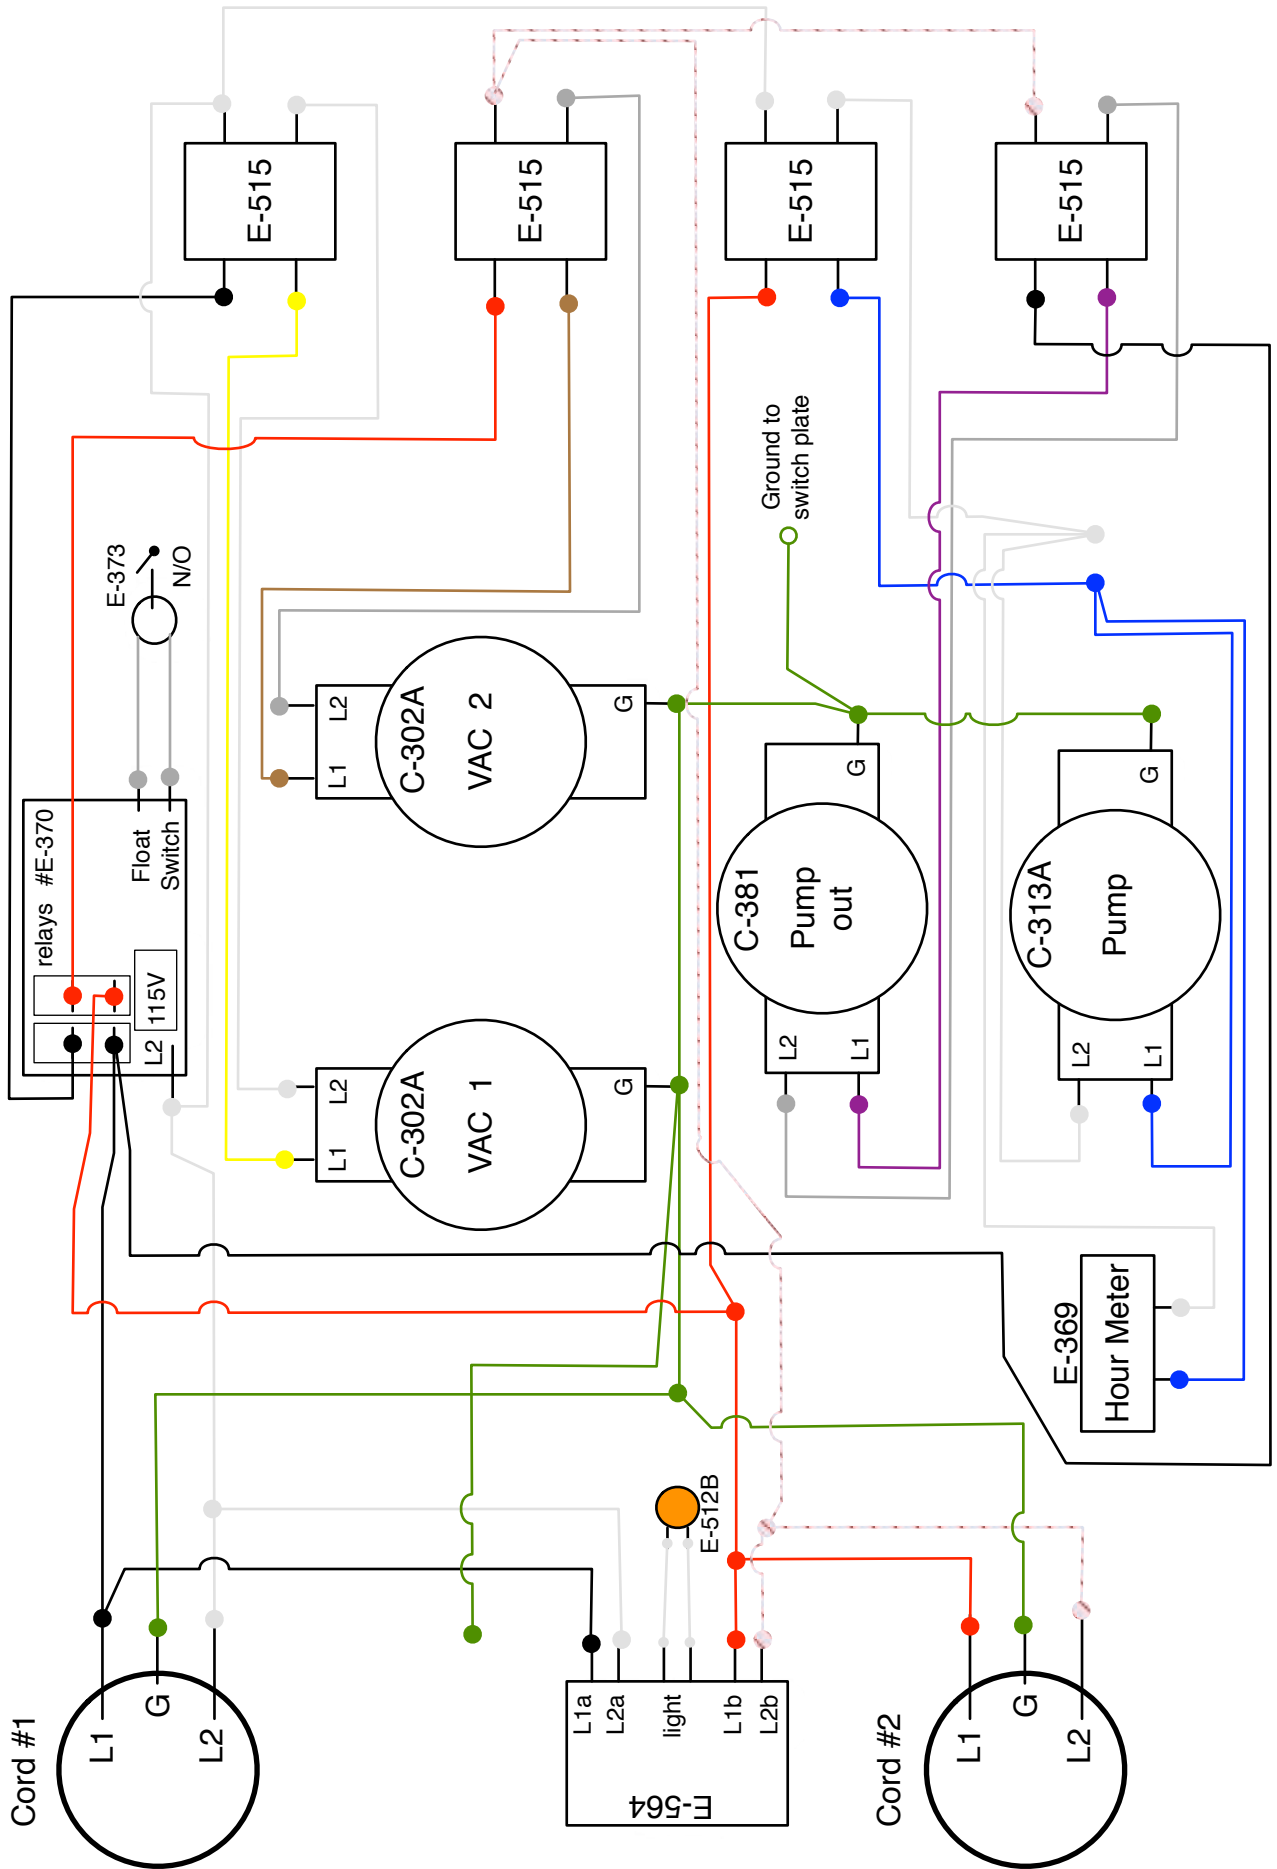


SPEEDSTER® LTD12

SPEEDSTER® LTD12 FRONT

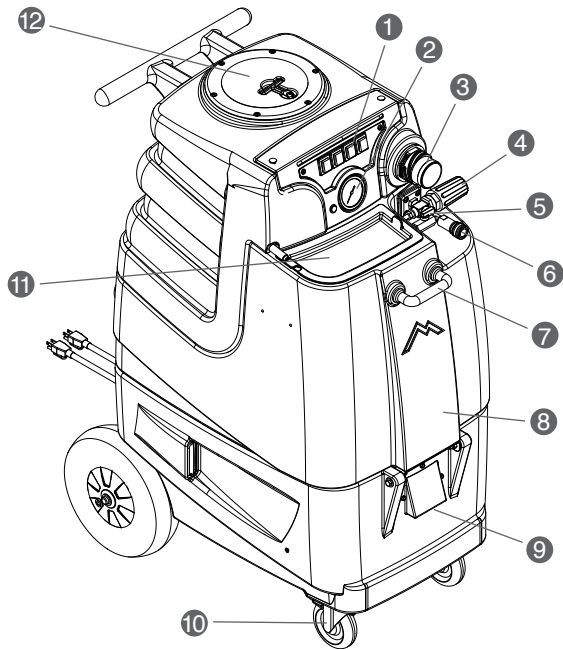


- | | |
|-----------------------------|------------------------|
| 1. Switch Plate | 7. Front Handle |
| 2. PSI Gauge | 8. Solution Tank |
| 3. 2" Male Cuff-Lynx™ Inlet | 9. Front Vent |
| 4. Pressure Regulator | 10. 4" Locking Casters |
| 5. Prime Valve | 11. Solution Lid |
| 6. Female Quick Disconnect | 12. Recovery Lid |

SPEEDSTER® LTD12 BACK

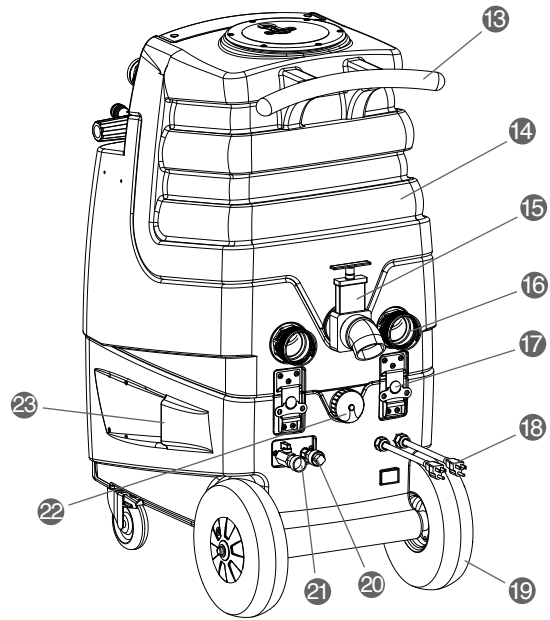


- | | |
|-------------------------------|---|
| 13. Push Handle | 19. 10" foam filled semi-pneumatic wheels |
| 14. Recovery Tank | 20. Auto Fill Connection |
| 15. Recovery Tank Drain Valve | 21. Pump Out Hose Connection |
| 16. Rear Vacuum Exhaust | 22. Solution Tank Drain |
| Optional Muffler Port | 23. Side vent |
| 17. Service Latches | |
| 18. Power cords | |

SPEEDSTER® LTD12 ITEMS INCLUDED

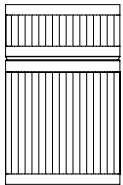


H110 Cuff-Lynx™
2" x 2" Hose Adapter

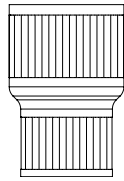

H141 Cuff-Lynx™
2" x 1.5" Hose Reducer



G008 - Pack of Piglet™
filters

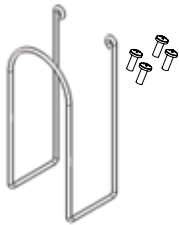

H375 - Hose Hanger
(4) screws




H226 Drain Elbow

SPEEDSTER® LTD12 CORDS


(Primary) Right Cord: Plug in yellow-tagged power cable for Power To Vac 1, & Pump.

(Secondary) Left Cord: Plug in power cable for Vac 2 and the Pump-out.

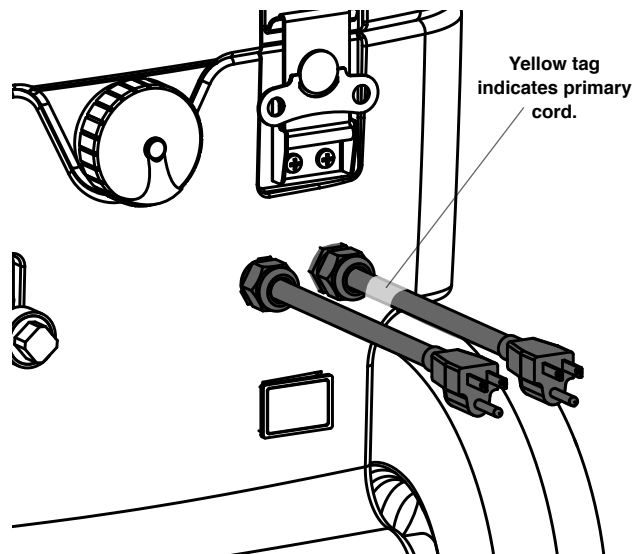


Plug each power cord into a separate, 20A grounded wall outlet. **Outlets must be on two separate breakers.** When the amber light on the switch plate illuminates, the machine is on separate circuits (not necessarily 20A circuits). You can identify the primary cord by the yellow tag.

SPEEDSTER® LTD12 VAC/SOL HOSE CONNECTIONS

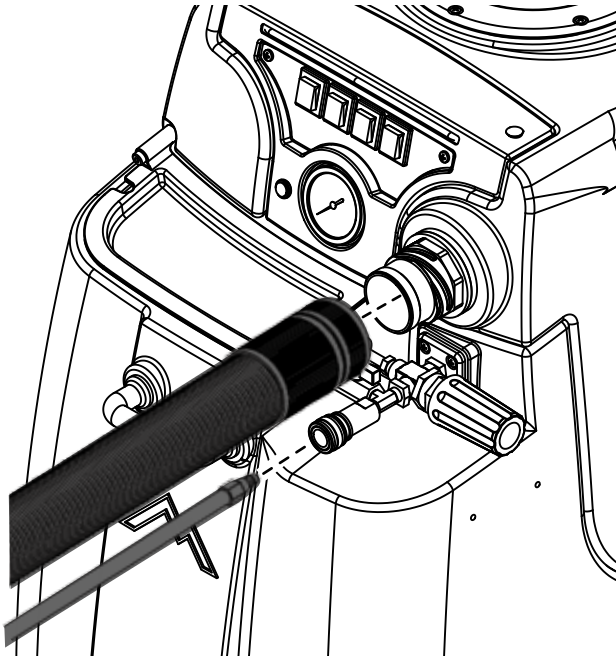


Attach female end of a solution hose to a wand or tool and the male end to the LTD's QD. Then connect a vacuum hose to a wand and the 2" male Cuff-Lynx™ hose port. (If using the optional de-foamer, install the kit onto the vacuum port according to the instructions that come with the de-foamer kit.)

SPEEDSTER® LTD12 SWITCHES

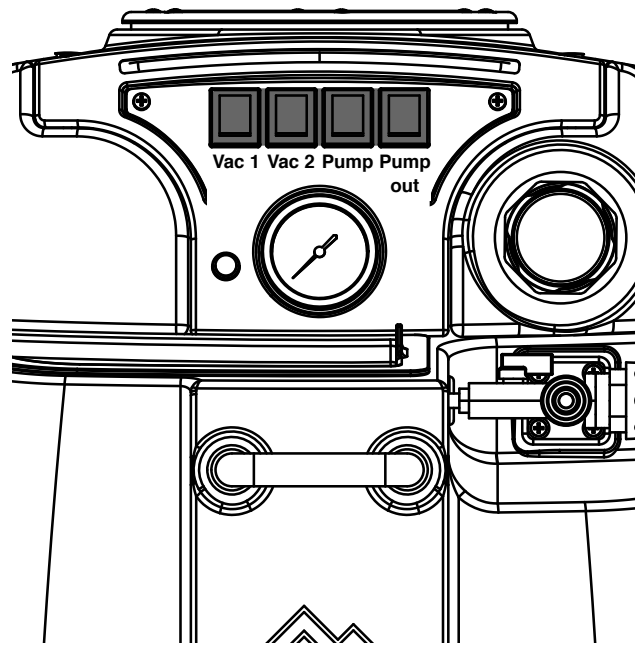

To use vacuum, turn on Vac 1 and Vac 2. To use pump, turn on Pump. To use pump-out, turn on Pump-Out switch.


SPEEDSTER® LTD12 PRIME VALVE & PRESSURE REGULATOR

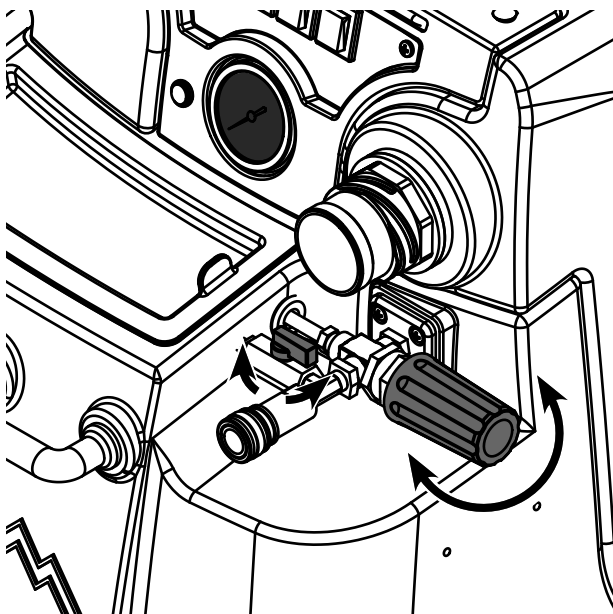

Prime the pump by having the Prime Valve parallel with its pipe and turn it clock-wise to run the pump. Turning the Pressure Regulator to its left will decrease water pressure and turning to the right will increase water pressure.


*Please refer to the Pressure Gauge to monitor your water pressure.

SPEEDSTER® LTD12 FILL SOLUTION TANK

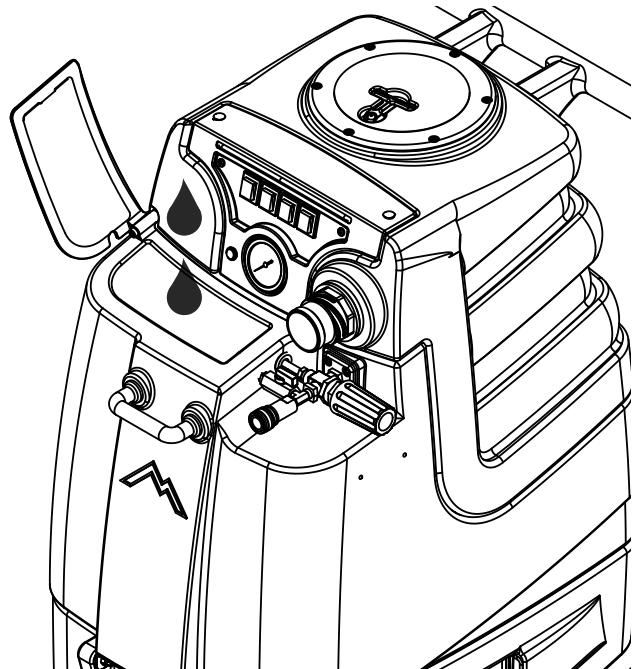


You can lift the lid to manually fill the tank or follow the "Operating Instructions" for auto-fill use.

SPEEDSTER® LTD12 FLOAT SWITCHES

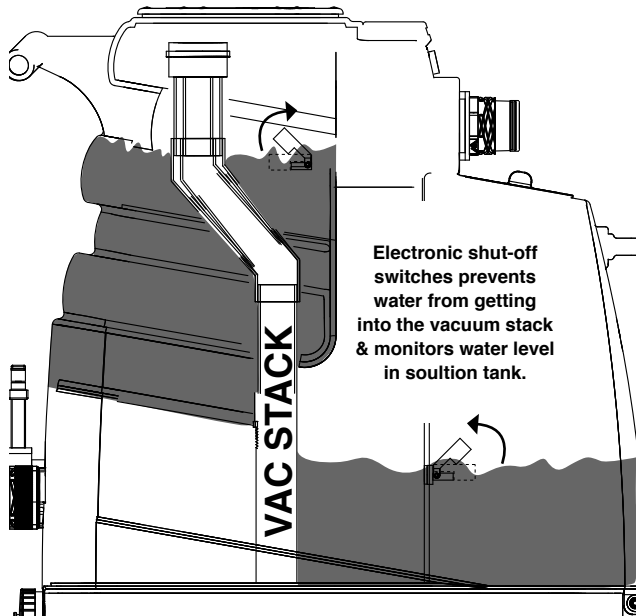


The LTD is equipped with an electronic float switch inside the recovery and solution tank. The recovery float switch is activated by rising water to prevent suction into the vacuum stacks damaging the motors. The solution float switch shuts off the auto-fill once water level reaches switch.

SPEEDSTER® LTD12 AUTO-FILL CONNECTIONS

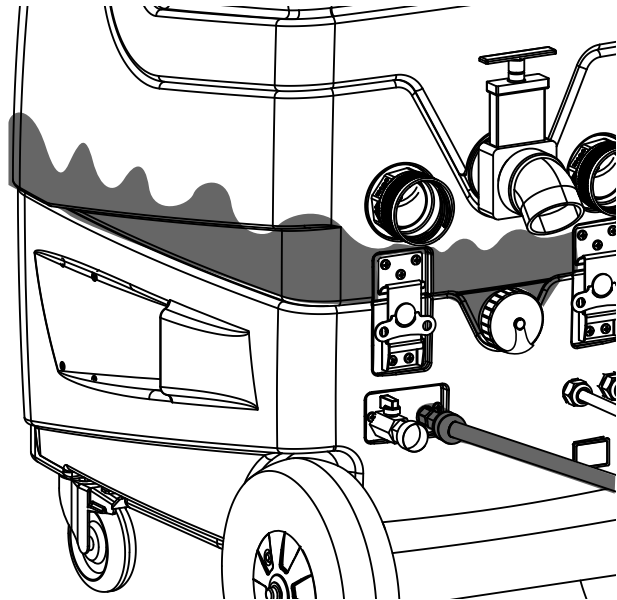


Using one end of a 1/2" garden hose, attach it to the mounted connection behind the LTD unit, then attach the other end to the desired faucet connection. With the auto-pump switch activated, turn on the faucet water and let the auto-fill begin to fill. It will shut off when the water level reaches the LTD's electronic float switch.

SPEEDSTER® LTD12 PUMP-OUT CONNECTIONS

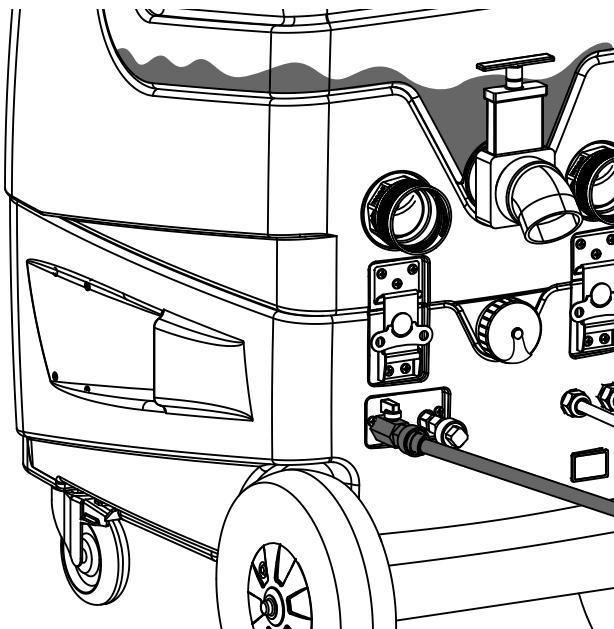


Using a separate 1/2" garden hose, attach one end to the LTD's mounted pump-out connection and lay the other end of the hose in a drainable location. With the pump-out switch activated and the valve parallel with its pipe, the unit will automatically drain water from the fill tank while the auto-fill maintains water levels. Make sure ball valve is open!

SPEEDSTER® LTD12 RECOVERY DRAIN VALVE

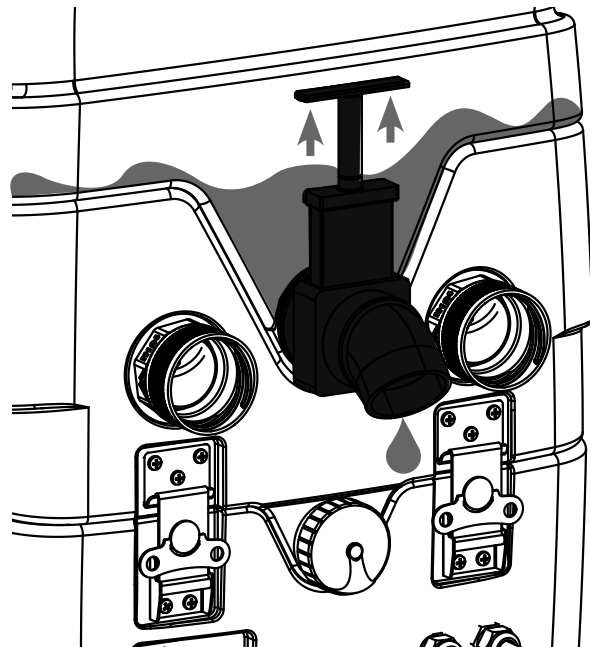


Make sure the Auto-Fill is turned off and then locate and lift the bucket high drain valve on the rear of the LTD unit to empty the tanks.

SPEEDSTER® LTD12 SOLUTION TANK DRAIN VALVE

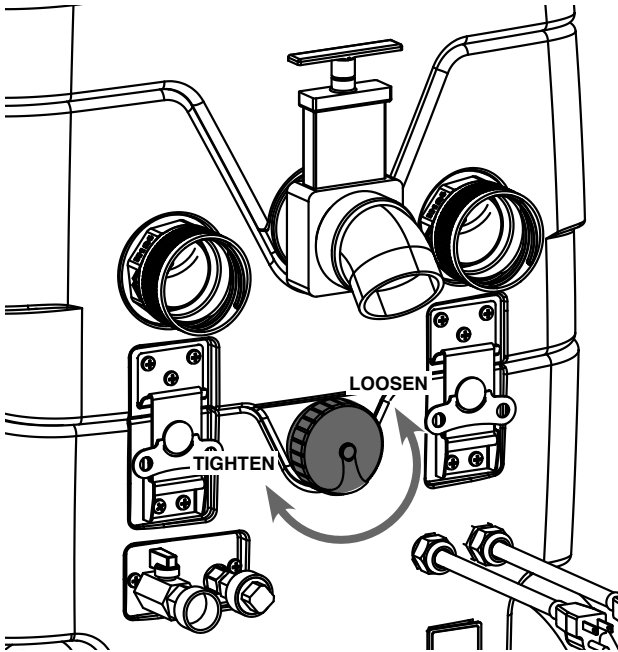


To remove any remaining water in the solution tank, located on the back of the unit is a cap, twist and remove cap to empty tank.

SPEEDSTER® LTD12 FILTER MAINTENANCE

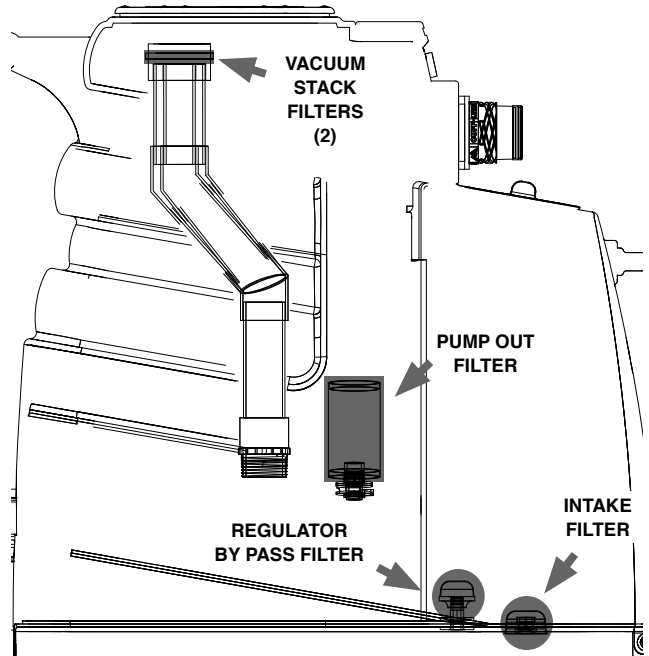


The LTD's five internal filters must be cleaned regularly and are located in the locations listed in the following diagram. Twist the filters to remove them then clean and replace in original locations. If a filter is torn or damaged, replace with a new one.

SPEEDSTER® LTD12 TANK LATCHES & PUMP HOUR METER

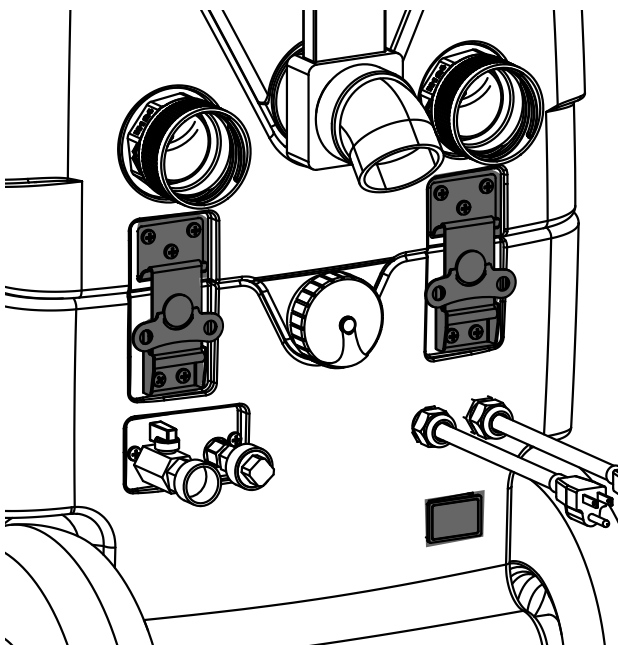

The rear latches can be unlatched from the lower half of the unit to open it for internal repairs and cleaning. To unlatch, flip and twist latches. The hour meter activates when the pump is turned on. This helps monitor usage and when to make oil changes. Refer to p.24 for oil maintenance instructions.

MYTEE® SYSTEM MAINTAINER

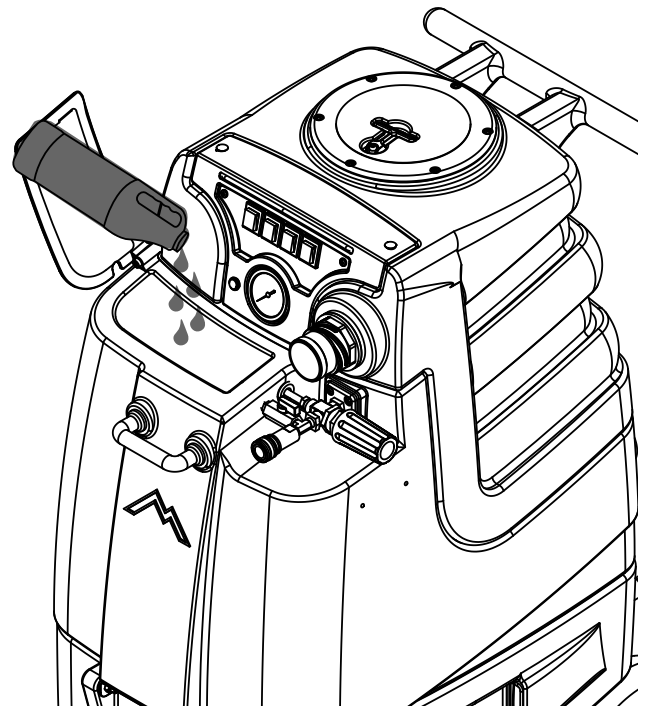


Weekly flushing of the solution system with Mytee System Maintainer helps keep lines clean and prevents chemical build-up, improving pump life, performance, and pressure.

SPEEDSTER® LTD12 PARTS & PRICING

ITEM NO.	PART #	DESCRIPTION	QTY.	MSRP	ITEM NO.	PART #	DESCRIPTION	QTY.	MSRP
1	H212	flat washer, 9/16" ID x 1 1/16" OD, AN960-C916	4	\$0.99 ea	63	B119A	filter, strainer, 1/2"	1	\$6.49 ea
2	B199	coupler, 1/2" fpt x 1/4" fpt	3	\$8.99 ea	64	H201	bolt, 1/4-20 x 1/2", hex head, zinc	2	\$0.99 ea
3	B644	adapter, brass, 1/2" barb x 1/4" mpt	1	\$2.49 ea	65	H213	washer, 1/4" lock, s/s	8	\$0.99 ea
4	H347	climp, hose, 5/16-29/32	14	\$1.99 ea	66	H378	bracket, front hinge, sp/fb	1	\$8.99 ea
5	PH615-9	sol hose, 1/2", 3045psi, black	1	\$8.99 ft	67	H204	bolt, 1/4-20 x 1 3/4" hex head, s/s	2	\$0.99 ea
6	H273	nut, kep, #10-32 zinc	16	\$0.99 ea	68	B131	fitting, 1/4" barb x 1/8" FPT	2	\$2.99 ea
7	H213	washer, 1/4" flat, s/s	30	\$0.99 ea	69	PH634-18	sol hose, 1/4", silicone braided, clear	1	\$6.49 ea
8	H186	screw, 10-32 x 3/4, phill flat full thread	8	\$0.99 ea	70	H325	flow meter, electric truck mount	1	\$189.99 ea
9	C381	pump out, 115v	1	\$187.49 ea	71	G069	gasket, flow meter	1	\$0.99 ea
10	PH615-37	sol hose, 1/2", 3045psi, black	1	\$8.99 ft	72	H246	screw, 8-32 x 3/8" SHCS, alloy, black	2	\$0.99 ea
11	H219	cap, axle, 1/2"	2	\$0.99 ea	73	B117	strainer, with check, chemical injector	1	\$18.99 ea
12	H109	wheel, 10", foam filled	2	\$79.99 ea	74	PH634-26	sol hose, 1/4", silicone braided, clear	1	\$6.49 ea
13	H232	axle, 19.60" x 50"	1	\$99.99 ea	75	H547	hanger, wire for injection sprayer	1	\$7.49 ea
14	H254	washer, axle, cut 1/2" id	4	\$0.99 ea	76	H4568	cap only w/ hole	1	\$3.99 ea
15	P514	vent, side, LTD	2	\$5.00 ea	77	P534	bottle, 7 quart, w/ caps	1	\$17.99 ea
16	H668	caster, 4", black hub & gray tread	2	\$19.49 ea	78	G036	cap, 2.5" threaded, tethered	2	\$3.49 ea
17	H342	bolt, 1/4-20 x 1" hex head, s/s	8	\$0.99 ea	79	H485	handle, breeze and dx	1	\$6.99 ea
18	H216	nut, lock, 1/4-20, nylon insert, s/s	14	\$0.99 ea	80	H768	bolt, 1/4-20 x 3/4", serrated hex flange, zinc	2	\$0.99 ea
19	H343	screw, 10 x 5/8" hex head, zinc	4	\$0.99 ea	81	G052	washer, buna 1-1/8" od x 3/16" id	2	\$1.99 ea
20	C317	fan, cooling, 115v	1	\$21.49 ea	82	H211	washer, 1/4" id x 1" od, flat, s/s	2	\$0.99 ea
21	E370	controller, water level, dual pump or vac	1	\$94.99 ea	83	H650	bolt, 5/16" shoulder x 1-1/2" lg, alloy	1	\$0.99 ea
22	H202	bolt, 1/4-20x3/4" hex head	4	\$0.99 ea	84	P513	solution tank lid, LTD	1	\$9.00 ea
23	B135	tee, brass, 1/4" mpt	2	\$5.49 ea	85	H390A	bracket, "L"	2	\$6.99 ea
24	B143	street elbow, 90 degrees, 1/8"	4	\$2.99 ea	86	H770	bolt, 1/4-20 x 1/2", serrated hex flange, zinc	4	\$0.99 ea
25	C332	pump head, general, 2.1 GPM	1	\$569.99 ea	87	P509	LX series sol tank	1	\$141.95 ea
26	B172	elbow, brass, 90 deg, 1/2" barb x 3/8" mpt	1	\$9.49 ea	88	H124	Cuff-Lynx, 2" mpt x 2" female cuff	2	\$3.99 ea
27	PH615-23	sol hose, 1/2", 3045psi, black	1	\$8.99 ft	89	PH634-20	sol hose, 1/4", 300 PSI	1	\$6.49 ft
28	B160	adapter, brass, 1/2" barb x 3/8" fsw, ball end	2	\$3.49 ea	90	B109	adapter, brass, 1/4" barb x 1/4" mpt	2	\$1.99 ea
29	B168	adapter, 3/8" NPTF x 3/8" NPTM	1	\$3.99 ea	91	H484	plate, mounting, QD	1	\$4.99 ea
30	B169	tee, 3/8" Street Tee, MP1 x PT x FPT	1	\$23.99 ea	92	AH117	hose, pulse, black, 1/4" fswl x 1/4" fswl, 40" (OAL)	2	\$19.99 ea
31	B246	plug, brass, 3/8" mpt, hex	1	\$1.99 ea	93	H3068	unloader, 1200 psi	1	\$126.49 ea
32	B105	bushing, brass, 3/8" mpt x 1/4"	3	\$3.19 ea	94	B102	qd, brass, 1/4" f	1	\$17.99 ea
33	B216	nipple, brass, 3/8" x close	2	\$1.99 ea	95	B656	ball valve, 1/4"	1	\$13.49 ea
34	B197	valve, solenoid, 1/4", 115V	1	\$89.99 ea	96	PH634-36	sol hose, 1/4", 300 PSI	1	\$6.49 ft
35	C329	motor, for pump, 1 HP, 1725 RPM	1	\$359.99 ea	97	H308D	gauge, pressure, 2000 PSI	1	\$38.99 ea
36	P511	LX series base	1	\$196.99 ea	98	E512B	light, indicator, 125v (amber)	1	\$9.99 ea
37	PH615-32	sol hose, 1/2", 3045psi, black	1	\$8.99 ft	99	E515	switch, rocker, 2 position	4	\$13.99 ea
38	B123	adapter, brass, 1/2" barb x 1/4" fpt	1	\$4.99 ea	100	H029	plastite screw, 10 x 1/2"	2	\$0.99 ea
39	B107	nipple, brass, 1/4" m, hex	3	\$3.19 ea	101	H074	plate, switch, lkd5, lkd12	1	\$5.99 ea
40	G068	bumper, 7/8" x 1/4" head	2	\$1.99 ea	102	H031	plastite screw, 10 x 1"	2	\$0.99 ea
41	H486	latch, front	2	\$13.99 ea	103	H434	plug, vent, heyco, 1/2"	2	\$4.48 ea
42	H230	screw, 10-32 x 1/2", phill pan head, s/s	20	\$0.99 ea	104	P512	LX series switchbox	1	\$24.00 ea
43	H211	nut, lock, 1/2" steel	2	\$1.99 ea	105	H135	Cuff-Lynx, 2" m cuff x 2" mpt	1	\$3.99 ea
44	H220	fitting, strain relief, cord	2	\$3.19 ea	106	G083	gasket, 2" inlet	1	\$2.49 ea
45	E530	power cord, pigtail, 30', 12/3, black	2	\$11.49 ea	107	H314	nut, lock, 1-1/2", steel	1	\$1.99 ea
46	E564	controller, circuit light	1	\$62.99 ea	108	P520	adapter, pvc, 1-1/2" mpt x 1-1/2" fms	2	\$2.99 ea
47	E369	hour meter, panel mount, analog	1	\$35.99 ea	109	P503	adapter, 1.5" pvc, 45 deg, fsip x fsip	4	\$3.29 ea
48	H039	plate, auto fill/ pump out	1	\$9.99 ea	110	G091	gasket, 7", vac lid	1	\$11.99 ea
49	B656A	ball valve, 1/2" mx 1/2" f	1	\$16.49 ea	111	G090	lid, vac tank, clear, 7"	1	\$36.99 ea
50	B205B	QD, 1/2" npt x 3/4" mgh, pump-out	2	\$3.99 ea	112	H304	screw, #8 x 5/8 phill oval, s/s	6	\$0.99 ea
51	B204	qd, 3/4" female x female garden hose	2	\$9.99 ea	113	PH633-1	pipe, pvc, 1-1/2"	2	\$4.99 ft
52	H541A	valve, float, autofill	1	\$108.99 ea	114	G022	filter, foam, 2-3/8" x 1"	2	\$2.99 ea
53	B198	coupler, 3/4" fpt x 1/2" mpt	1	\$16.99 ea	115	G097	screen, mesh filter, 1-1/2" dia	2	\$4.99 ea
54	B167	street elbow, 1/2" fpt x 1/2" mpt	1	\$10.99 ea	116	P502	adapter, 1.5" pvc, fsip x fsip	2	\$5.00 ea
55	B303	nipple, 3" x 1/4" npt x 1/4" npt	2	\$8.99 ea	117	PH633-06	pipe, pvc, 1-1/2" x 6" PVC	2	\$4.99/ft
56	B208	coupling, 3/8" fpt x 1/4" fpt	1	\$8.99 ea	118	PH633-03	pipe, pvc, 1-1/2"	2	\$4.99/ft
57	H541C	chemical injector	1	\$39.99 ea	119	PH633-4	pipe, pvc, 1-1/2"	2	\$4.99/ft
58	B186	elbow, brass, 90 deg, 3/8" mpt x 3/8" fmp	2	\$8.99 ea	120	A926	elbow, inlet assembly, 2"	1	\$20.99 ea
59	H299	washer, 1 1/16" id x 1-1/2" od x 0.75, s/s	9	\$0.99 ea	121	H225	valve, drain, 1-1/2"	1	\$3.19 ea
60	B129	nipple, hex, 1/8" mpt x 1/8" mpt	2	\$1.99 ea	122	H226	spout, drain, 45 degree	1	\$99.99 ea
61	B103	elbow, brass, 90 deg, 1/4" mpt x 1/4" fpt	1	\$4.49 ea	123	P510	LX series vac tank	1	\$99.99 ea
62	B210	bushing, brass, 1/2" mpt x 3/8" fpt, hex	2	\$2.49 ea	124	H333	mesh filter, auto dump, 1/2" npt	1	\$12.99 ea


ITEMS NOT SHOWN

PART NO.	DESCRIPTION	QTY	MSRP
E352	LED strip light, with lead wires	1	\$26.99 ea
E530	power cord, ext 50', 12/3, black	2	\$74.99 ea
G008	piglet filter	1	\$6.29 ea
G076	filter bag, 3.5" metal o-ring, mesh bag	1	\$4.99 ea
H110	Cuff-Lynx, 2" hose x 2" fem swivel	1	\$3.99 ea
H140	Cuff-Lynx, female swivel x female thread	1	\$3.99 ea
H141	Cuff-Lynx, 2 x 1.5" reducer	1	\$3.99 ea
H375	hanger, wire formed, hose	1	\$6.99 ea
AD127	stop sign, register your product	1	\$2.00 ea
ADM Cuff Lynx	Cuff-Lynx instruction guide	1	n/a

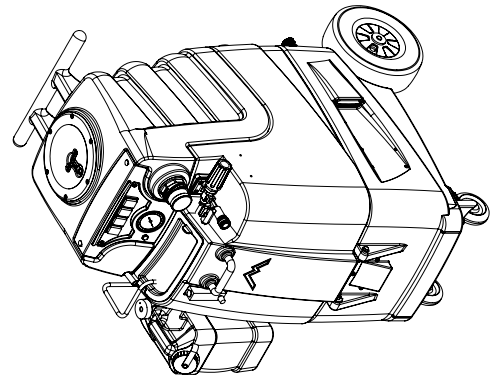

NAME	DATE	mytee PRODUCTS, INC.
DRAWN	10/2013	681051701
CHECKED		
COMMENTS		
PROHIBIT ANY COPIING, REPRODUCING, OR TRANSMITTING IN ANY FORM OR BY ANY MEANS, WITHOUT THE WRITTEN PERMISSION OF THE COMPANY.		
TITLE	speedster	
SIZE	DWG. NO.	REV
C	LTD 12	F
SCALE: 1:12		SHEET 1 OF 3

SPEEDSTER® LTD12 PARTS & PRICING

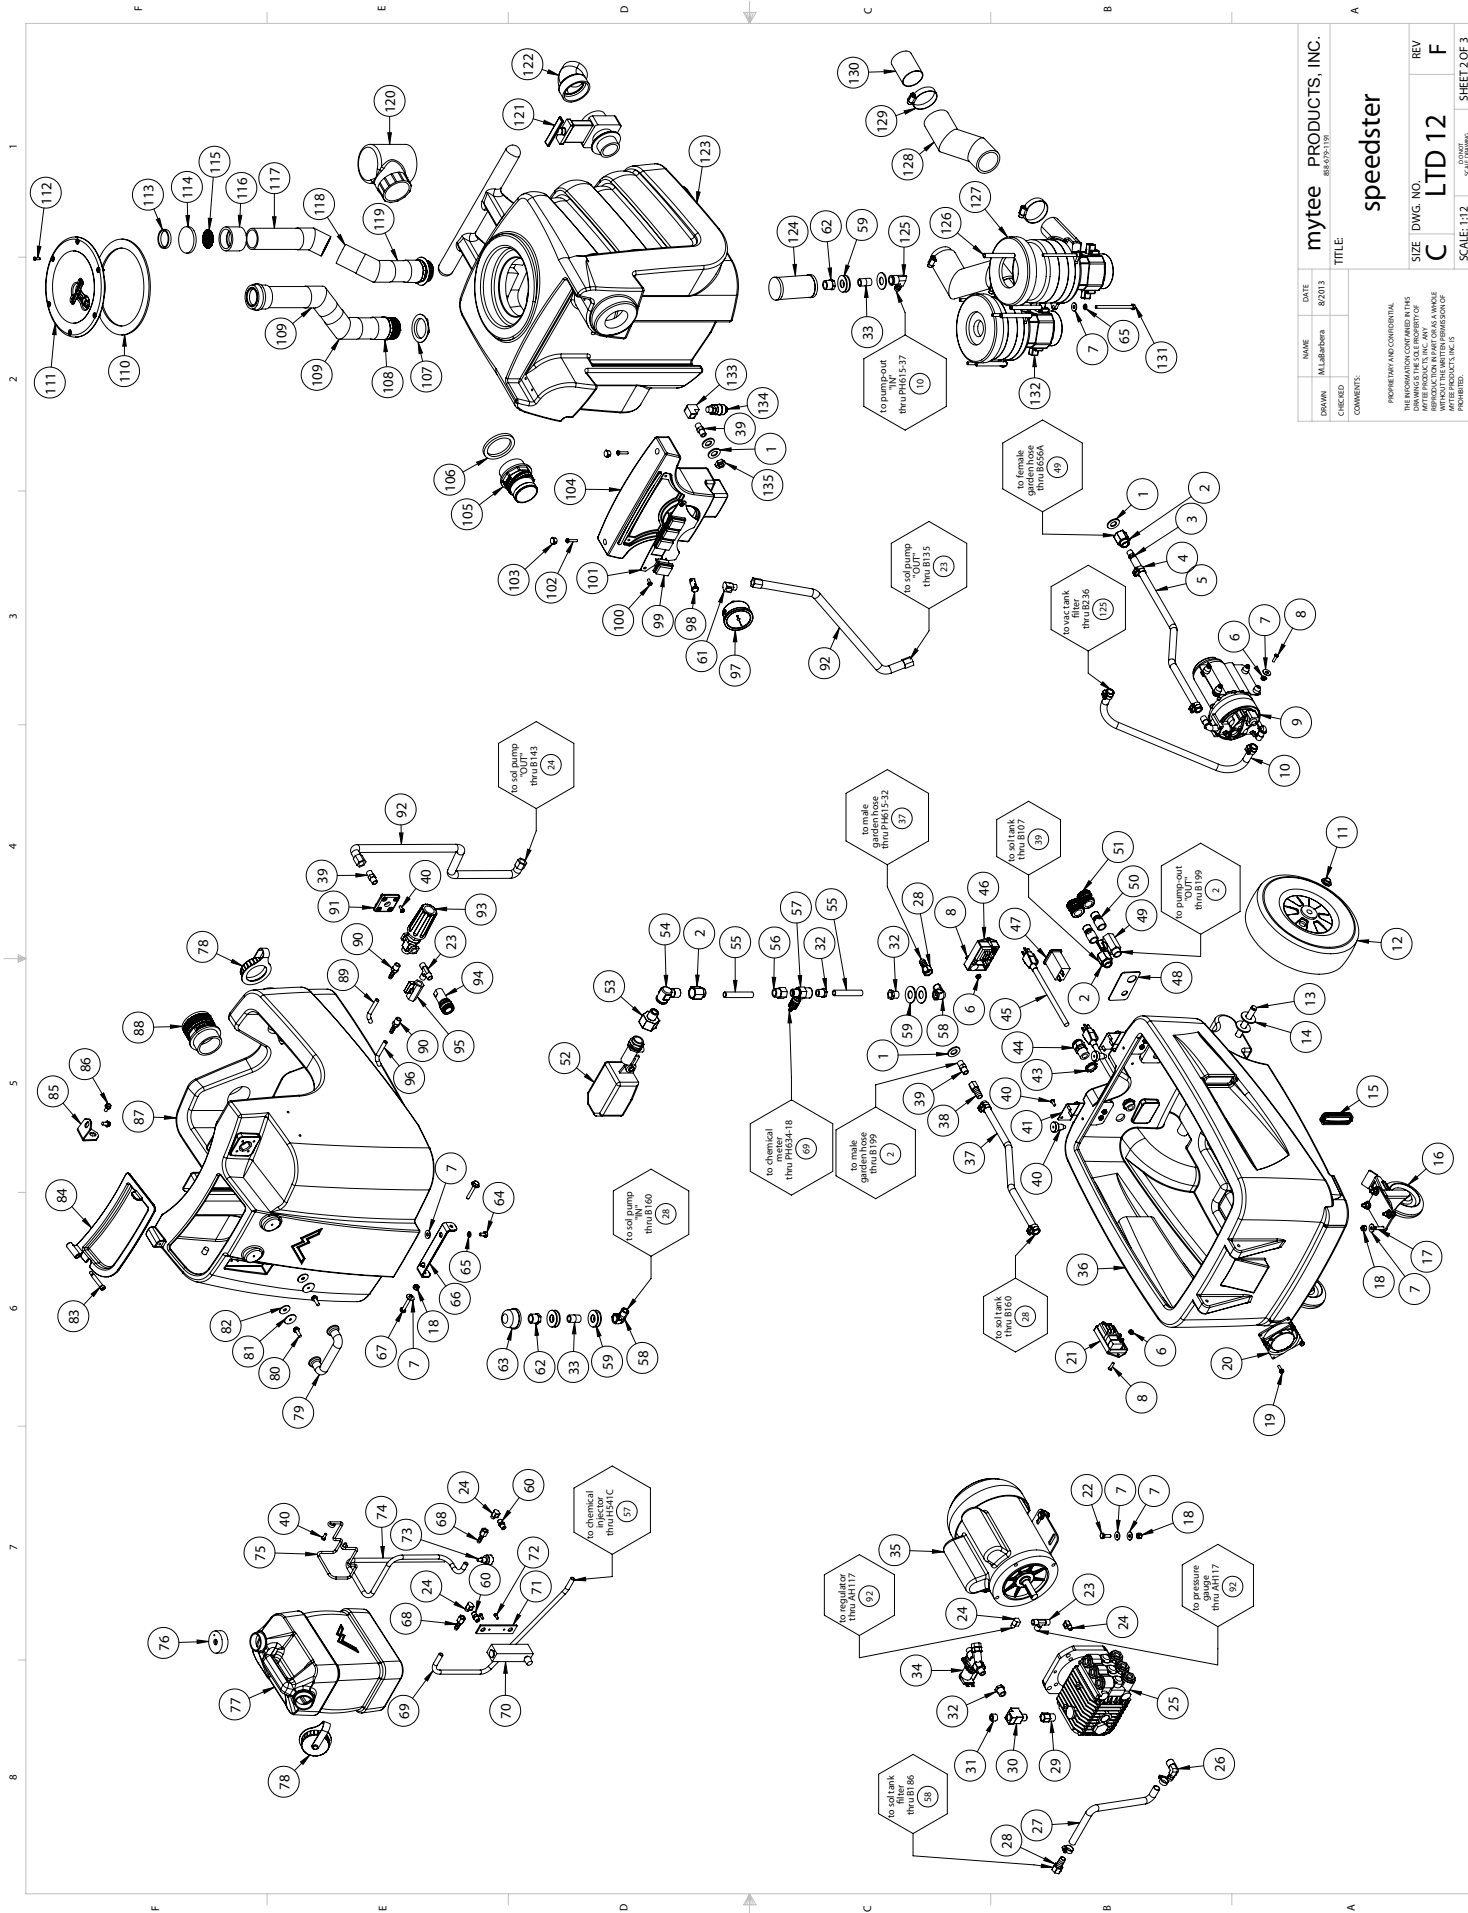


NAME	DATE	mytee PRODUCTS, INC.
DESIGN	8/2013	88-895139
CHECKED		
COMMENTS:		
TITLE: speedster SIZE: DWG. NO. LTD 12 SCALE: 1:12 SHEET 2 OF 3		

PROPERTY AND CONFIDENTIAL INFORMATION OF MYTEE PRODUCTS, INC. ANY REPRODUCTION OR DISTRIBUTION OF THIS DRAWING WITHOUT THE WRITTEN PERMISSION OF MYTEE PRODUCTS, INC. IS PROHIBITED.

SPEEDSTER® LTD12 WIRING DIAGRAM

LTD-12 115 Volt System

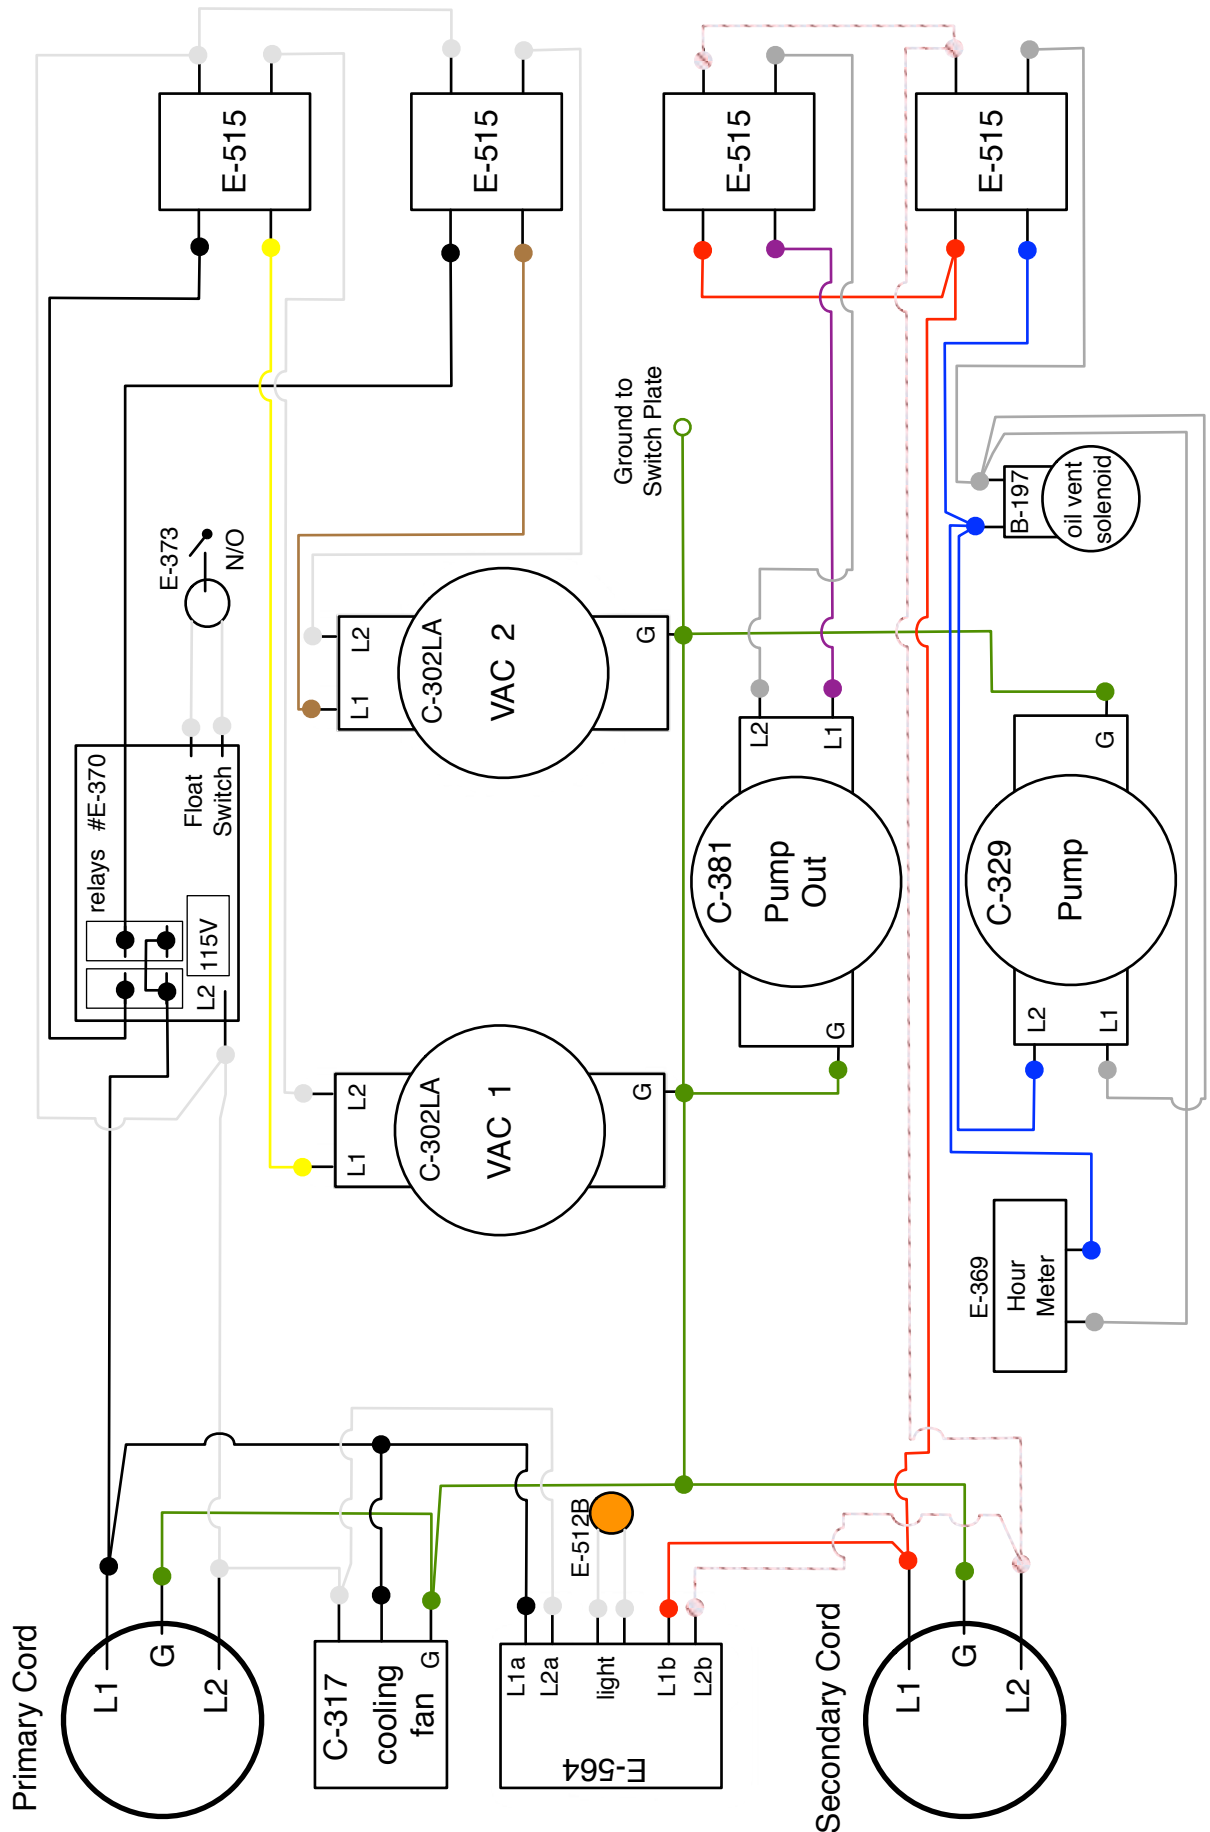

Dear Customer:

Congratulations on the purchase of your new LTD Speedster® extractor. As technology continues to develop you can work confidently knowing that both Mytee Products Inc. and its employees are equally dedicated to developing with the industry and its advances.

Like any other piece of machinery or technology, the LTDs also requires the proper maintenance and care to keep the product working over extended use. Neglecting your machine, abusing it or not operating it properly can void its warranty and prevent the machine from performing to the quality and standard you'd expect out of the Mytee Products Inc. line.

If you have any warranty concerns or questions, please review this manual thoroughly or do not hesitate to contact your distributor. If there are questions regarding maintenance, replacement or ordering parts please contact an authorized Mytee Products Inc. Service Center. To see an updated list please visit our website at www.mytee.com/help/service.php

Before using your Mytee Product, please read this manually thoroughly. Sincerely,
Mytee Customer Care Dept.

Grounding Instructions

This machine must be grounded. If it should malfunction or breakdown, grounding provides a path of least resistance for electrical shock. This machine is equipped with a cord having an equipment-grounding conductor and grounding plug. The plug must be plugged into an appropriate outlet that is properly installed in accordance with all local code and ordinances. Do not remove ground pin; if missing, replace plug before use.



DANGER

Improper installation of the equipment-grounding conductor can result in a risk of electric shock. Be sure to check with a qualified electrician or service person if you are in doubt as to whether the outlet is properly grounded. If the plug will not fit in the outlet do not modify either the plug nor the machine's cord, instead have a proper outlet installed by a qualified technician.


This machine is for use on a nominal 120-volt circuit and with a grounding plug similar to the one in Figure 1 below. If a proper outlet is not available, follow the illustrations of Figure 2 & 3 to install a temporary-grounding plug. This temporary work-around should be used only until a proper outlet (Figure 1) can be installed by a qualified electrician. When and if this type of adapter is employed, screw the adapter's extended tab into place with a metal screw. However, grounding adapters are not approved for use in Canada.

Again, be sure to check the grounding pin for damages and replace if necessary.

The Green, or Green-Yellow, wire in the cord is the grounding wire. When replacing a plug, this wire must be attached to only the grounding pin.

DO NOT use extension cords.

Please Note for America use only

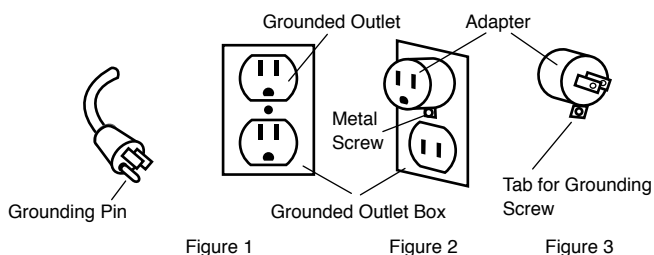

Parts and Service

Please contact a Mytee service personnel or Mytee authorized Service Center using Mytee original replacement parts and accessories for repairs are needing to be performed. When and if calling Mytee for support, please have your Model and Serial Number available for faster assistance.

Name Plate

The Model and Serial Number are located on the lower half of the back of the machine near the power plugs and will be required for ordering replacement parts. You can use the space provided on the front of this manual to note down both for future referencing.

Unpacking the Machine

When your new machine is delivered, please carefully inspect both the shipping carton and the machine for damages. If damage is evident, save both the shipping carton and machine so that the delivering carrier can inspect it. Contact the carrier immediately to file a freight claim if there has been any damage.

Caution and Warnings

Symbols

Mytee uses the symbols below to signal potentially dangerous conditions. Always read this information carefully and take the necessary steps to protect personnel and property.



DANGER

Is used to warn of immediate hazards that will cause severe personal injury or death.



WARNING

Is used to call attention to a situation that could cause severe personal injury.



CAUTION

Is used to call attention to a situation that could cause minor personal injury or damage to the machine or other property. When using an electrical appliance, basic precautions should always be followed, including the following: Read all instructions before using this machine. This product is intended for commercial use only.



WARNING

To reduce the risk of fire, electrical shock, or injury:

1. Read all instructions before using equipment.
2. Use only as described in this manual. Use only manufacturer's recommended attachments.
3. Always unplug power cord from electrical outlet before attempting any adjustments or repairs.
4. Do not unplug by pulling on cord. To unplug, grasp the plug, not the cord.
5. Do not pull or carry by cord. Do not close a door on cord or pull cord around sharp edges or corners.
6. Do not run appliance over cord. Keep cord away from heated surfaces.
7. Do not use with damaged cord or plug. If cord is damaged, repair immediately.
8. Do not use outdoors or on wet surfaces and or standing water.
9. Always unplug or disconnect the appliance from power supply when not in use.
10. Do not allow to be used as a toy. Close attention is necessary when used by or near children.
11. Do not use in areas where flammable or combustible material may be present.
12. Do not leave the unit exposed to harsh weather elements. Temperatures below freezing may damage components and void warranty.
13. Use only the appropriate handles to move and lift unit. Do not use any other parts of this machine for this purpose.
14. Keep hair, loose clothing, fingers, and all parts of the body away from

GENERAL INFORMATION

all openings and moving parts.

15. Use extra care when using on stairs.
16. To reduce the risk of fire or electric shock, do not use this machine with a solid-state speed control device.
17. The voltage and frequency indicated on the name plate must correspond to the wall receptacle supply voltage.
18. When cleaning and servicing the machine, local or national regulations may apply to the safe disposal of liquids which may contain: chemicals, grease, oil, acid, alkalines, or other dangerous liquids.
19. Do not leave operating unattended.

Preparation

1. Remove furniture and other items from the area you are going to clean.
2. Vacuum carpet and upholstery, and remove debris.
3. Protect cabinets, walls and painted surfaces with drop cloths or plastic.
4. Inspect power cords for damages.

Operating Instructions

1. Fill the solution tank.
2. Attach female end of a solution hose to a wand or other tool and the male end to the LTD's Quick Disconnect (QD).
3. Attach one end of a vacuum hose to a wand or other tool and the other end to the LTD's 2" Cuff-Lynx vacuum hose ports.
4. Plug in power cords:

LTD3/5/12 Model: Using two separate circuits/breakers, plug in the grounded power cables as previously instructed using the appropriate grounding techniques.

The amber indicator to the left of the PSI gauge will illuminate and sound a tone when plugged into separate circuits/breakers.

1. Activate the switches using the following steps:
2. When the hoses are attached, turn Pump-Out Switch.
3. The Prime Valve and Pressure Regulator are located on the front right side of the solution tank and should be primed prior to use. To prime the pump turn the valve to the Prime position for 30 seconds, and then turn horizontally to the Run position.
4. Pull your wand's trigger to ensure water is running through the lines to avoid damage to the Pump and Heating unit (LTD3).
5. (LTD3) The heater switch has three positions: Off (Middle); 1,000 watts using 1 heater (Top); 600 watts & 1,600 watts using 2 heaters (Bottom) If the water heater is to be used, prime system and turn it on to the desired wattage and wait five minutes for the water to reach temperature.
6. To clean, make two dry passes for every one wet pass while working away from the power cords. For optimal use or heavily soiled areas, repeat wash steps in the opposite direction.
7. To prevent motor or internal damage, use a preferred foam control solution in the recovery tank. Remember to check for build-up in both the recovery and solution tanks!
8. Empty the Recovery Tank when the internal shut off disengages the vacuum. Attach the 45° drain elbow to the drain spout located in the back and lift the dump valve to empty the tank.
9. Squeeze the wand or tool's trigger for five seconds after turning the power switches off to relieve any existing line pressure.
10. When the machine is off: unplug the power cables, remove solution and vacuum hoses, and empty the recovery tank by attaching the 45° drain elbow.
11. To empty the solution tank, twist off the solution tank drain cap located on the back of the machine.

After Use

1. Before storing the machine, drain, rinse and dry both the tanks and vacuum hoses of any residual water or solution.
2. Store standing upright in a dry, enclosed location.
3. Leave the recovery tank lid open for better air circulation.
4. If storing in freezing temperatures, take extra precautions to make sure the machine and solution systems are completely drained and dry.

Maintenance Schedule

Latches are located in the back to open the tank for internal maintenance. To keep machine in good working condition, follow the below recom-

mended daily and weekly maintenance procedures. Relief valves should be replaced annually.

Maintenance item	Daily	Once a week
Clean and inspect tanks.	x	
Clean and inspect hoses.	x	
Check and clean internal filters by twisting off, rinsing with clean water and replacing.	x	
Check power supply cable.	x	
Clean machine with all-purpose cleaner and cloth.	x	
Check spray nozzles.	x	
Flush solution system with Mytee® System Maintainer.		x
Remove and float shut-off screen from tank and clean. Simply pull off.		x
Inspect vacuum hoses for holes and loose cuffs.		x
Inspect spray pattern for clogging. If clogged, remove spray tips and soak them in a recommended liquid neutralizer for up to six hours. To remove spray tip, twist spray tip body counter-clockwise.		x
Lubricate wheels with water resistant oil.		x
Inspect machine for water leaks and loose hardware.		x

Oil Maintenance

Each machine using the General Pump Head(add TM or C icon) will need its first its first oil change within 50-100 hours of use, then every three months for 500 hours after that. Regular lubrication is the easiest, most efficient and least expensive element in preventative maintenance according to the manufacturer, General Pump.

Required Equipment:

1. 9/16" Wrench or socket.
2. 7/8" Socket with ratchet to fit.
3. 11 oz SAE 30w Oil
4. Oil catch pan capable of holding 11 oz of oil (Height ≤ 2")
5. Oil funnel capable of fitting oil port on top of General Pump head brass tee (3/8" diameter)
6. Flash light (Optional)

Instructions:

1. Cover ground with cardboard or any available scrap material to prevent unwanted spills and stains.
2. Slide ≤ 2" oil catch pan under the ball valve located under the bottom front of the machine and to the left of the solution tank drain.
3. Release the two rear latches by turning its wings to the left then open top half of the machine completely to expose the main pump.
4. Remove the 9/16" oil cap from the brass tee on top of the General Pump head.
5. Unscrew then 7/8" oil plug from under the machine until finger loose.
6. Once the oil has stopped or slowed to a few drips, replace the lower oil plug then tighten it with a 7/8" socket.
7. Using a funnel, pour 11oz of SAE 30w oil into the top of the General Pump head through the brass tee.
8. Use a flashlight to check the side of the General Head to ensure the oil level reaches the midpoint of the view glass. Add or remove oil as needed.
9. Replace the 9/16" plug on top of the brass tee using a wrench or socket.
10. Close the machine and re-latch its rear to avoid any separation during transport.
11. Dispose of any old oil and continue normal use of the machine.

Filter Maintenance

All LTD models have six filters that need to be checked and cleaned after each week of use. Regular filter maintenance is a simple way to extend the life of your machines.

Vacuum Stack Filters:

Located inside of the black vacuum tank are two pvc vacuum stacks. Each stack has one foam filter to help prevent waste material from getting into

the vacuums and cause damage. To maintain these filters:

1. Remove the 7" clear vacuum lid.
2. Reach in and pull out the two black filters located in the top of the vacuum stacks.
3. Clean the filters under a faucet of any debris and check for damage. If the filters are not damaged, place them back in the stacks. If filters are damaged and falling apart, replace them.

Pump-Out Filters

The pump-out filter is located on the inside bottom of the black vacuum tank. It is recognizable by its cylindrical shape. To maintain filter:

1. Remove the 7" clear vacuum tank lid.
2. Reach in and unthread the cylindrical filter by rotating it counter clockwise. A flashlight may be needed to locate the filter.
3. Once the filter is out, slide off foam sleeve that surrounds the wire screen. Check for debris and damage. Rinse filter of any debris or replace if damaged.
4. Place filter back into vacuum tank by rotating it clockwise onto the brass nipple.

Pump Filters

The pump is a half-circle shaped screen located on the inside bottom of the blue solution tank. To maintain filter:

1. Open black solution tank lid.
2. Reach into solution tank and rotate the dome-shaped filter from its brass nipple by rotating it counter clockwise.
3. Check filter for any debris or damage to screen. Rinse filter of any debris or replace if damaged.
4. Place new or cleaned filter back onto brass nipple by rotating it clockwise.

Auto-Fill Solenoid Filter

The solenoid filter is located inside of the auto-fill solenoid, which is inside the base of the machine. The filter will be connected to the auto-fill male QD that extends from the back of the machine. To maintain the filter:

Required Tools:

- 7/8" Wrench or crescent wrench.
- 3/4" Wrench

1. Open the machine by undoing the rear latches and rocking the top of the unit forward until it is resting on the ground and the internals of the base are exposed.
2. Locate the solenoid attached to the rear auto-fill and pump-out plate.
3. Place the 7/8" wrench or crescent wrench on the rear part of the solenoid closest to the inside of the auto-fill plate to help prevent rotation during steps 4 & 6.
4. Use the 3/4" wrench to loosen the 3/4" plug on the front of the solenoid.
5. Remove the solenoid screen and check for any debris or damage to screen. Rinse the screen of any debris or replace if damaged.
6. Replace the 3/4" brass plug and screen then you can continue use as normal.

Oil Vent Solenoid Filter

The oil vent's solenoid filter is located on top of the general pump head inside the base of the machine. It will be connected to the brass tee coming out of the oil fill hole. To maintain filter:

Required Tools:

- 7/8" Wrench or crescent wrench.
- 3/4" Wrench

1. Open the machine by undoing the rear latches and rocking the top of the unit forward until it is resting on the ground and the internals of the base are exposed.
2. Locate the solenoid attached to the brass tee on top of the pump head.
3. Place the 7/8" wrench or crescent wrench on the rear part of the solenoid closet to the inside of the auto-fill plate to help prevent rotation during steps 4 & 6.
4. Use the 3/4" wrench to loosen the 3/4" plug on the front of the solenoid.

5. Remove the solenoid screen and check for any debris or damage to screen. Rinse the screen of any debris or replace if damaged.
6. Replace the 3/4" brass plug and screen then you can continue use as normal.

Trouble Shooting

There is no power.

1. Plug power cord(s) in proper outlet(s).
2. If using two cords, make sure each is plugged into a separate circuit.
3. Check circuit breaker and reset if tripped. There should not be any additional items in use on the same circuit as the machine and the outlet must be a 20-amp circuit.

LTD Float Switch Maintenance

Each LTD machine contains two water level float switches. These float switches control specific functions of the machine. The first float switch will control the auto-fill feature while the second float switch controls power to the vacuums. These levers prevent water from getting into the vacuum stacks and spilling out from the solution tank.

Vacuum Tank Float Switch Maintenance & Replacement

Cleaning and maintaining float switches will help extend the life of your machine. Regular cleaning is required for proper functionality. To clean the level switch:

1. Remove the 7" clear vacuum tank lid located on top of the tank.
2. Use a flashlight to locate the float switch that will be located on the front wall of the vacuum tank.
3. Once located, reach in and hold the float switch finger all the way to one side by pushing on the opposite side.
4. Using your other hand, or finger, roll the clip off of its tabs by pulling on the bottom of the opposite tab from which you are pushing. It should not take a lot of pressure to remove the switch, so be careful not to break it.
5. Check the float finger and where it attaches for debris or any other damage and if dirty, clean. If one of the male tabs where the float hooks is damaged, refer to the float switch replacement section.
6. Once cleaned, replace the float finger flat side down onto the male position tabs located on the float switch neck in the vacuum tank. First, hook one loop of the finger on one tab then roll and pull the other tab with your index finger until it snaps back into place.
7. Check to ensure the float switch still works by turning on both vacuums with the vacuum tank lid off. Reach inside and lift the float finger. If vacuums turn off, the float works. If the vacuums stay on, the float body may need replacing, or the float finger is installed upside down.

Vacuum Tank Float Switch Replacement

Required:

- Colored tape
- New float switch, rubber washer and plastic nut
- Silicone
- Medium/deep depth 13/16" socket and ratchet
- Medium crescent wrench
- Long shaft Phillips screw driver
- Flathead screwdriver

Instructions:

1. In a clear and open space, lay down a piece of cardboard or scrap material.
2. Undo the rear latches of LTD machine by turning them counter clockwise
3. Open the machine until it is resting on the scrap material previously placed on the floor, which will help minimize scratching and damage to the front of the LTD machine.
4. Locate the vacuum tank's float switch wires coming out of the black vacuum tank and disconnect the two float switch wires that are plugged into the system. At this point, use the colored tape to mark the wires that the float switch was unplugged from.
5. Close the machine.
6. Locate blue switch plate box that holds the switches. Using the flat head screwdriver, remove the two black caps covering the Philips head screws that hold the switch box.

GENERAL INFORMATION

- Using the Philips head screw driver, remove the two Philips head screws and pull the blue face box out.
- Once the blue switch box is removed, the back end of the vacuum float switch should be visible.
- Remove the 7" clear vacuum tank lid located on top of the vacuum tank. Use a flashlight to locate the position of the float switch on the front wall inside of the tank.
- Once located, reach in and hold the float switch lever all the way to one side by pushing on the opposite side.
- Using your other hand, or finger, roll the clip off of its tabs by pulling on the bottom of the opposite tab from which you are pushing. It should not take a lot of pressure to remove the switch, so be careful not to break it.
- Place the medium crescent wrench on the back nut of the float switch and the 13/16" socket on its inside nut. Loosen the float by rotating the ratchet counter clockwise until completely loose. Make sure not to lose any nuts or rubber washers in case they are needed in the future.
- On the new float switch, hold the float switch lever all the way to one side by pushing on the opposite side.
- Using your other hand, or finger, roll the clip off of its tabs by pulling on the bottom of the opposite tab from which you are pushing. It should not take a lot of pressure to remove the switch, so be careful not to break it.
- Place the rubber washer over the threads of the new switch and all the way down to the 13/16" nut side.
- Place a thin layer of silicone on the rubber washer.
- Thread float switch-with actuating finger off-wires back through vacuum tank hole and thread it in using the 13/16" socket. Make sure the wires go down into the base of the machine.
- Using your hand, thread the plastic nut onto the backside of the float switch placing the medium crescent wrench on the nut to hold in place.
- Tighten the 13/16" float until snug. Make sure the flat side of the body is facing towards the top of the vacuum tank.
- Replace float finger, flat side down, onto the male position tabs located on the float switch body in the vacuum tank. First, hook one side of the finger to one tab. Then roll and pull the tab with index finger until other clip snaps into place.
- Replace blue switch box with two Philips screws.
- Return the black plugs back over the screw holes for a clean and professional appearance.
- Open the machine until it is resting on the scrap material previously placed on the floor.
- Locate the vacuum tank float switch wires coming out of the black vacuum tank and re-connect the two float switch wires into the previously marked ones. It will not matter which wire you plug into each port, just make sure both wires are re-connected.
- Close the machine and re-latch.
- Check to ensure the new float switch works by turning on both vacuums with the vacuum tank lid off. Reach inside and lift the float finger. If vacuums turn off, the float works. If the vacuums stay on or will not turn on, the float finger may be installed upside down or wires were not connected completely.

Auto-fill Float Switch Maintenance and Replacement

Cleaning and maintaining float switches will help extend the life your machine. Regular cleaning is required for proper functionality. To clean auto-fill level switch:

- Open the black lid on the blue solution tank.
- Use a flashlight to locate the auto-fill tank's float switch, which is on the back wall of the blue tank about 5" from the bottom of the tank.
- Once located, reach in and hold the float switch finger all the way to one side by pushing on the opposite side.
- Using your other hand, or finger, roll the clip off of its tabs by pulling on the bottom of the opposite tab from which you are pushing. It should not take a lot of pressure to remove the switch, so be careful not to break it.
- Check the float finger and where it attaches for debris or any other damage and if dirty, clean. If one of the male tabs where the float hooks is damaged, refer to the float switch replacement section.
- Once cleaned, replace the float finger flat side down onto the male position tabs located on the float switch neck in the vacuum tank. First, hook one loop of the finger on one tab then roll and pull the other tab with your index finger until it snaps back into place.

- Check to ensure the float switch still works by turning on both vacuums with the vacuum tank lid off. Reach inside and lift the float finger. If vacuums turn off, the float works. If the vacuums stay on, the float body may need replacing, or the float finger is installed upside down.

Auto-fill Float Switch Replacement

Required:

- Colored tape
- New float switch, rubber washer, and plastic nut
- Silicone
- Medium/deep depth 13/16" socket and ratchet
- Medium crescent wrench

- In a clear and open space, lay down a piece of cardboard or scrap material.
- Undo rear latches of LTD machine by turning them counter clockwise.
- Open the machine until it is resting on the scrap material previously placed on the floor, which will help minimize scratching and damage to the front of the LTD machine.
- Locate auto-fill float switch wires coming out of the blue solution tank and disconnect the two float switch wires that are plugged into the system. At this point, use the colored tape to mark the wires that the float switch was unplugged from.
- Close the machine halfway by setting the handle on a 5-gallon bucket or stand of similar height.
- Locate the position of the float switch inside of the solution tank on the back wall of the tank.
- Once located, reach in and hold the float switch lever all the way to one side by pushing on the opposite side.
- Using your other hand, or finger, roll the clip off of its tabs by pulling on the bottom of the opposite tab from which you are pushing. It should not take a lot of pressure to remove the switch, so be careful not to break it.
- Place the medium crescent wrench on the back nut of the float switch and the 13/16" socket on its inside nut. Loosen the float by rotating the ratchet counter clockwise until completely loose. Make sure not to lose any nuts or rubber washers in case they are needed in the future.
- On the new float switch, hold the float switch lever all the way to one side by pushing on the opposite side.
- Using your other hand, or finger, roll the clip off of its tabs by pulling on the bottom of the opposite tab from which you are pushing. It should not take a lot of pressure to remove the switch, so be careful not to break it.
- Place the rubber washer over the threads of the new switch and all the way down to the 13/16" nut side.
- Place a thin layer of silicone on the rubber washer where it will be contacting the solution tank wall.
- Thread float switch-with actuating finger off-wires back through vacuum tank hole and thread it in using the 13/16" socket. Make sure the wires go down into the base of the machine.
- Using your hand, thread the plastic nut onto the back side of the float switch placing the medium crescent wrench on the nut to hold in place.
- Tighten the 13/16" float until snug. Make sure flat side of the float body is facing towards the top of the solution tank.
- Replace float finger, flat side down, onto the male position tabs located on the float switch body in the vacuum tank. First, hook one side of the finger to one tab. Then roll and pull the tab with index finger until other clip snaps into place.
- Locate auto-fill float switch wires coming out of the blue solution tank into the machine. Re-connect the two float switch wires to the previously marked wires. It will not make a difference which wires you plug into each port, just make sure both wires are re-connected.
- Close the machine and re-latch.
- Check to ensure the float still works by hooking up the auto-fill feature like normal. Turn on water. Reach inside and lift the float finger. If water stops coming into the tank, the float works. If the water keeps pouring in, float finger may be installed upside down or wires may not be connected completely.

Pump does not work properly

- Snap quick disconnects firmly together.
- Check solution tank; may be empty.

3. Jets clogged, remove jet and flush clean.
4. Filters clogged, remove filters and rinse clean with water.
5. Heater is blocked; flush out with Mytee's® System Maintainer.
6. If brass check valve is stuck, replace valve.
7. Check pump wire. May need to reconnect wire.
8. Switch plate may need to be replaced.
9. If pump motor brushes are worn, replace pump.

Speedster® LTD3 heater does not work properly

1. If sensor mounted on the heater has popped, reset sensor by pushing in button.
2. Heating element may need to be replaced.

Vacuum motor does not work properly

1. Check that hose is tightly connected.
2. Close drain hose valve completely.
3. Secure the vacuum tank tightly.
4. If water is coming out of the vacuum motor, use a low foaming detergent.
5. Clean upholstery tool or floor wand jets.

FAQs

Q: How much do the Speedster® LTD Series extractors weigh and what are the dimensions?

A: All Speedster® LTDs
Machine Dimensions: 30" x 20" x 42"
Shipping Dimensions: 37 ¼" x 21" x 50 ¾"

LTD3 – Machine Weight: 145 lbs.
Shipping Weight: 185 lbs.

LTD5 – Machine Weight: 135 lbs.
Shipping Weight: 175 lbs.

LTD12 – Machine Weight: 140 lbs.
Shipping Weight: 180 lbs.

Q: What comes standard with Speedster® LTDs?

A: Two 50' power cords, hose hanger with screws, two Cuff-Lynx™ Model Numbers: H141 Reducer and H110 Coupler Swivel, pack of Piglets™ and 45° drain elbow.

Q: Does Mytee® recommend tools for this machine?

A: All upholstery tools and wands can be used with the Speedster® LTD series.

Q: Is there anything I can do to increase the expected life of my machine?

A: Running the vacuum motors with the tank empty and lid off will allow excess moisture in the vacs to dry off. You should also run Mytee's® System Maintainer through the system to keep the hoses, pump, and heater clean and free of debris.

Mytee Limited Warranty Policy

Mytee Products, Inc. endeavors to provide high quality products and product support to its customers and therefore backs up all of its new products purchased from Mytee Products Inc. (Mytee) or any authorized Mytee distributor/service center with this limited warranty.

This limited warranty begins on the date of the customer purchase and is valid and available to the original purchaser only. Mytee products are for commercial use only and are not intended for personal, family or household uses.

HOWEVER, OTHER THAN SET FORTH HEREIN, MYTEE GIVES NO WARRANTY, EXPRESS OR IMPLIED, AS TO DESCRIPTION, QUALITY, MERCHANTABILITY, FITNESS FOR ANY PARTICULAR PURPOSE, PRODUCTIVENESS, INFRINGEMENT, OR OTHER MATTER, OF ANY GOODS WHICH MYTEE SHALL SUPPLY. THERE ARE NO WARRANT-

TIES, WHICH EXTEND BEYOND THE DESCRIPTION ON THE FACE HEREOF. MYTEE SHALL IN NO WAY BE RESPONSIBLE FOR THE PROPER USE AND APPLICATION OF THE GOODS. MYTEE NEITHER ASSUMES NOR AUTHORIZES ANY OTHER PERSON TO ASSUME FOR MYTEE ANY OTHER LIABILITY IN CONNECTION WITH THE SALE OF MYTEES GOODS. THIS LIMITED WARRANTY POLICY MAY BE CHANGED OR WITHDRAWN BY MYTEE AT ANY TIME WITHOUT NOTICE.

90-DAY PARTS AND LABOR LIMITED WARRANTY: Mytee will cover parts and labor on all components for 90 days from the date of original purchase. This warranty covers the cost of replacement and labor only, and does not cover shipping costs.

WEAR PARTS 90-DAY LIMITED WARRANTY: Mytee will replace all wear parts for 90 days from the date of original purchase. Wear parts are items which wear out as a result of usage or the passage of time and are consumed despite attempts to maintain them, such as gaskets, wheels, brass, cords, wires, electrical terminals, hoses, switches, thermostats, plastisol parts, filters, bearings, brushes, solenoids, o-rings, bulbs, heating elements, castors, or other parts deemed wear items in Mytees sole discretion. This warranty covers the cost of replacement only and does not cover shipping or labor costs.

1-YEAR MAJOR COMPONENTS WARRANTY: Mytee warrants that pumps, vacuum and floor machine motors, and heaters are covered for a one (1) year limited warranty from the date of original purchase. This warranty does not apply and is void if the pump, vacuum motor, or heater has worn brush motors, water damage, chemical build-up, chemical damage, or evidence of abuse, neglect or tampering. This warranty covers the cost of replacement only, and does not cover shipping or labor costs.

HOUSING LIFETIME LIMITED WARRANTY: Mytee warrants that all rotationally molded housing and tanks will be free from manufacturing defects, defects in workmanship, and defects in material for the life of the part. Replacement cost does not include the cost of shipping or labor.

LIMITATION OF DAMAGES: THE REMEDY OF REPLACEMENT OR REPAIR OF ANY DEFECTIVE GOODS SHALL BE THE EXCLUSIVE REMEDY UNDER ANY WARRANTY MADE BY MYTEE, WHETHER EXPRESS OR IMPLIED. IN NO EVENT SHALL MYTEE BE LIABLE FOR ANY INCIDENTAL OR CONSEQUENTIAL DAMAGES, PROPERTY DAMAGES, OR PERSONAL INJURIES.

All limited warranties are void for, and Mytee does not warrant in any way, any product that evidences misapplication, improper installation, abuse, lack of maintenance, negligence in use or care, abnormal use, alteration of design, use of incompatible or corrosive chemicals, use in a rental service, and/or servicing, installation of parts, or repairs by anyone other than Mytee or a Mytee authorized distributor or service center. Mytee may make changes in products it manufactures and markets at any time; these changes are made without obligation to change, retrofit, or upgrade any product previously sold or manufactured.

Mytee has no obligation to honor the limited warranties set forth herein unless the original purchaser, promptly upon discovering the warranty claim and prior to continuing to use the product, contacts Mytee or a Mytee authorized distributor or service center to describe the claim and to receive and follow instructions for documenting and resolving the claim. In addition, the purchaser must provide the product to which the claim applies to Mytee or a Mytee authorized distributor or service center for a thorough inspection.

If any provision or portion of this limited warranty policy is found to be unenforceable, then the remaining provisions and portions shall remain valid and enforceable. If any provision or portion of this limited warranty policy is found to be limited by law, then that provision or portion shall be construed to make it effective within the bounds of law. For example, if there are legal limitations on the duration of warranties, the warranties made herein shall be construed to have the minimum duration required by law, or, if there are legal limitations of exclusion of remedies, the exclu-

GENERAL INFORMATION

sions made herein shall be construed to apply to the fullest extent possible without violating the law.

The validity, construction and performance of this warranty policy shall be governed by the laws of the State of California, without respect to conflicts of laws principles. The exclusive jurisdiction of any legal action arising from or related to this warranty policy shall be in the State of California and no legal action shall be commenced elsewhere.

Return Material Authorization Procedure

It is the responsibility of any Authorized Service Center (ASC) or Distributor with written authorization to ensure the Customers equipment is repaired as soon as possible. Only Mytee Products Inc. or it's authorized dealers with written authorization, service centers, and agents may make warranty repairs on these products. All others do so at their own risk and expense.

The Distributor must follow Mytee Products, Inc. standard RMA procedure:

1. When a repair falls within the Warranty time period for a piece of equipment, the Distributor will fill out a RMA/Warranty claim form. This form will act as a repair order to replace any defective parts.
2. All defective parts must be returned to Mytee Products, Inc. with the RMA/claim form for evaluation at the customer's expense. This shipping is non-refundable. All warranty claims are subject to an evaluation by Mytee Products, Inc. to determine if warranty will be approved. Any credit for repair and/or parts will only be issued upon evaluation and approval from Mytee Products, Inc.
3. When Warranty is approved, the Distributor's account will be credited for the replacement part(s). Mytee Products, Inc. will ship the warranted replacement part(s) to the Distributor prepaid. If Warranty is denied the Distributor's account will not be credited for any parts sent for this claim.

NOTES

Parish-Supply.com
Syracuse, NY 315-433-9031
www.parish-supply.com

